

DDV9475

User's Guide

Go-Video/Sensory Science

7835 East McClain Drive
Scottsdale, Arizona USA 85260
www.sensoryscience.com
www.govideo.com

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not open the cabinet; dangerous high voltage is present. Refer servicing to qualified personnel only. This video cassette recorder should only be used with 120V, 60Hz (standard U.S. household) current.

Federal law provides severe civil and criminal penalties for the unauthorized reproduction, distribution, or exhibition of copyrighted motion pictures and videotapes. (Title 17, United States Code, Sections 501 and 506).

USER/INSTALLER CAUTION:

Your authority to operate this FCC certified equipment could be voided if you make changes or modifications not expressly approved by the manufacturer, who is responsible for compliance with Part 15 FCC rules.

NOTE TO CATV SYSTEM INSTALLER:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electronic Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

CAUTION:

To prevent fire, shock hazard, or annoying interference, use only the recommended accessories.

To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

To reduce the risk of electric shock, do not remove the unit cover or back. There are no serviceable parts inside. Refer servicing to qualified personnel only.

CUIDADO:

Para prevenir incendio, riesgo de choque, o interferencia enfadosa, use solamente los accesorios recomendados.

Para prevenir electrochoque, no use este enchufe (polarizado) con un cordón de extensión, toma de corriente, o cualquier otra toma a menos que los dientes puedan ser completamente insertados para prevenir exposición de los dientes.

Para reducir el riesgo de descarga eléctrica, no remueva la cubierta o la parte posterior del VCR. Dentro del VCR no hay partes que requieren servicio. Diríjase solamente a personal calificado cuando requiera servicio.

ATTENTION:

Pour éviter les incendis, risque de chocs, ou interférences fâcheuses, employer seulement les accessoires recommandés.

Pour éviter les chocs électriques, ne pas employer cette prise (polarisée) avec une rallonge, une prise de courant ou une autre sortie de courant à moins que les lames peuvent être insérées à fond pour l'exposition des lames.

Pour réduire les risques de chocs électriques, ne pas retirer le couvercle ou l'arrière du module. Il n'y a pas de pièce utilisable à l'intérieur. Ne faire effectuer l'entretien que par un personnel qualifié.





  <div>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</div>		This symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute risk of fire or electric shock.
<div>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</div>		This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying this product.

Table of Contents

Safety v

Important Safety Instructions	v
-------------------------------------	---

1 - Basic Connections 1

First Things First	1
Connect Antenna/Basic Cable	2

2 - Initial Settings 5

Auto Setup	5
Set Language Manually	6
Set Clock Manually	7
Set Daylight Savings Time	9
Set Time Zone	10
Set Auto Clock Set Channel	11

3 - The Dual-Deck System 13

Remote Control Overview	13
Front Panel Overview	15
Front Panel Inputs	16
Front Panel Display	17
Front Panel Display Settings	18
Child Lock	19
Remote Eject	20
Main Menu Tree	21
Setup Menu Tree	22
Menu Navigation - Remote Control	23
Menu Navigation - Front Panel	24
Reset Factory Settings	25
On-Screen Display Overview	26
On-Screen Display Elements	27
On-Screen Display (OSD) Settings	28

Go-Video is a registered trademark of Sensory Science Corporation. Copy Tape, Video Sequencing, and Dual-Deck VCR are trademarks of Sensory Science Corporation. All other brand and product names are trademarks or registered trademarks of their respective companies.

4 - Tuner & Channel List 29

Tuner Band	29
Auto Channel Search	30
Add Channel	31
Remove Channel	32
Show Weak Channels	33
Tuner Audio	34

5 - Copy Features 37

Basic Copying	37
EZ Copy	38
Copy Mode	39
Speed Matching	40
Copy Audio Insert	41

6 - Playback Features 43

Basic Playback	43
Special Playback Features	44
Tracking	46
Sequential/Loop Playback	47
Auto Play/Rewind	48
Playback Audio Settings	49

7 - Recording Features 51

Basic Recording	51
Recording Options	52
One-Touch Recording (OTR)	53
Record Speed	54
Record Source	55
Date/Time Stamp	56

8 - Timer Recording 57

How to Set a Timer Recording	57
Timer Recording Errors	62

9 - Editing Features 63

8-Scene Editor	63
Sync Editing	66
How to Cut Commercials with Skip Edit	68
On-Screen Titler	69
Recording Titler Message	70

10 - Search/Index Features 71

Overview	71
Placing Index Marks	72
Index Scan	73
Index Search	74
Blank Search	75
Direct Time Search	76
Return to 0:00:00	77

11 - Advanced Connections 79

Cable Box Hookup	79
Audio Connections	81
TV Monitor Connections	82
Connecting Other Video Equipment	83

Appendix A - Multibrand Remote 85

Multi-Brand Remote Setup	85
Multi-Brand Remote Operation	86

Appendix B - Help 87

Frequently Asked Questions (FAQs)	87
Technical Specifications	92
Dual-Deck VCR Limited Warranty	93

Index 95

Important Safety Instructions




PORTABLE CART WARNING

(Symbol provided by RETAC)

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the unit is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the unit and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating and maintenance instructions should be followed.
5. **CLEANING** - Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for dusting cabinet.
6. **ATTACHMENTS** - Do not use attachments not recommended by the video product manufacturer, as they may be hazardous.
7. **WATER & MOISTURE** - Do not use this video unit near water—for example, near a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool or the like.
8. **ACCESSORIES** - Do not place this video unit on an unstable cart, stand, tripod, bracket or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
- 8a. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. **VENTILATION** - Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place your VCR on a bed, sofa, rug or other similar surface, on or near a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **POWER SOURCES** - This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.
11. **GROUNDING OR POLARIZATION** - This video unit may be equipped with either a polarized 2-wire AC line plug (a plug having one blade wider than the other) or a 3-wire grounding plug having a third (grounding) pin.
The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **POWER-CORD PROTECTION** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
13. **OUTDOOR ANTENNA GROUNDING** - If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection

- to grounding electrodes, and requirements for the grounding electrode. See figure below.
14. **LIGHTNING** - For added protection of this video unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power line surges.
 15. **POWER LINES** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
 16. **OVERLOADING** - Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
 17. **OBJECTS AND LIQUIDS** - Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquids of any kind onto the unit. Should spillage occur, unplug unit and have it checked by a technician before use.
 18. **SERVICING** - Do not attempt to service this video unit yourself as opening or removing covers may expose you to a dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
 19. **DAMAGE REQUIRING SERVICE** - Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged.
 - b. If any liquid has been spilled onto or objects have fallen into the video unit.
 - c. If the video unit has been exposed to rain or water.
 - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
 - e. If the video unit has been dropped or the cabinet has been damaged.
 - f. When the video unit exhibits a distinct change in performance—this indicates a need for service.
 20. **REPLACEMENT PARTS** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or those having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
 21. **SAFETY CHECK** - Upon completion of any service or repairs to this video unit ask the service technician to perform safety checks to determine that the video unit is in safe operating order.
 22. **HEAT** - This video unit should be situated away from heat sources such as radiators, stoves, or other products (including amplifiers) that produce heat.

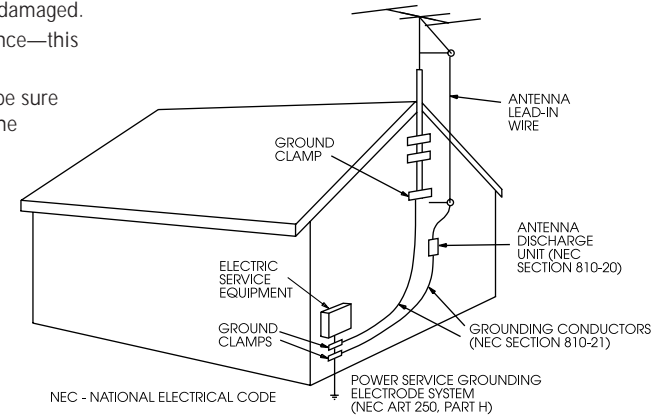


1 - Basic Connections

First Things First

1 Unpack your Dual-Deck VCR


As you unpack, please check that the following items are included in your Dual-Deck VCR packing case:

- Dual-Deck VCR
- User's Guide
- Remote Control
- 2 "AA" Batteries
- 1 RF (Radio Frequency) Antenna Cable
- Read Me First/Quick Reference Guide
- Warranty/Registration Card

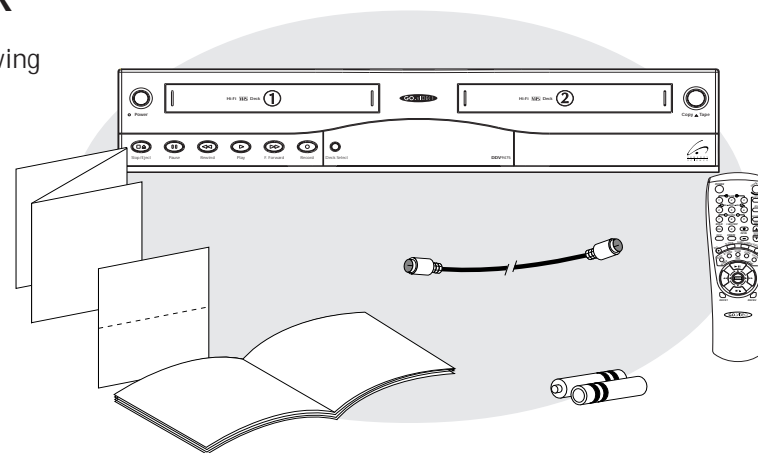

2 Insert Remote Control Batteries

Remove the battery cover by pushing down and sliding the cover in the direction of the arrow. Insert 2 "AA" batteries as shown, paying attention to the correct polarities (+/-). Replace the cover.

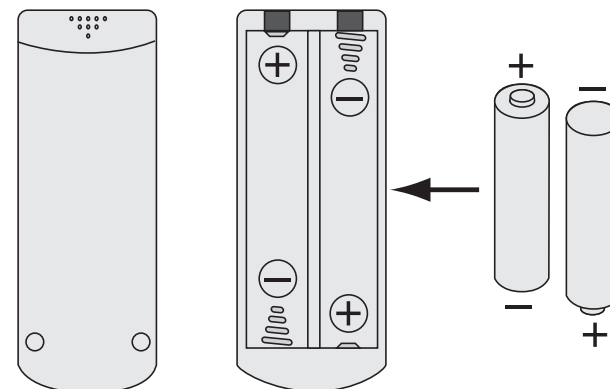

Connect Antenna/Basic Cable


Follow these steps only if you are using an indoor/outdoor antenna or basic cable. If you have a:

- Cable Box
- Stereo Receiver
- TV Monitor
- Third VCR
- Laserdisc Player
- DVD Player
- Camcorder
- Satellite Receiver
- Video Game

...or other advanced connection, please refer to Chapter 11.


1 Connect Antenna to VCR

Connect the RF antenna cable from your indoor/outdoor antenna or cable wall outlet to the IN (FROM ANT.) jack on the back panel of the VCR.

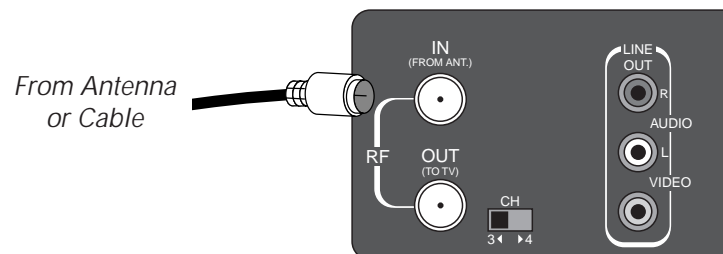


2 Connect VCR to TV

Connect the supplied RF cable from the OUT (TO TV) jack on the back panel of the VCR to your television's ANTENNA IN jack.

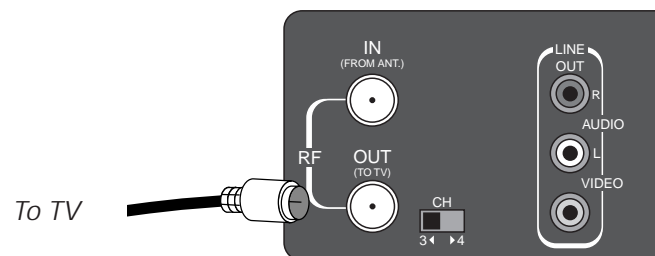


3 Set VCR Output Channel

Set the channel switch on the back panel of the VCR to 3 or 4, whichever is not an active channel in your area.

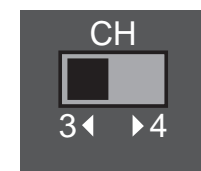



4 Plug In VCR

Connect the VCR power cord to a standard 120V/60Hz wall outlet.

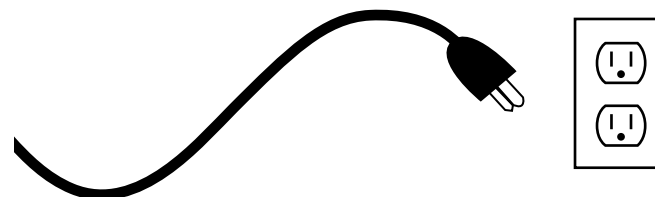


5 Turn On VCR

Press the Power button on the remote control or on the VCR's front panel.

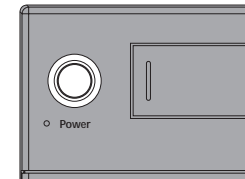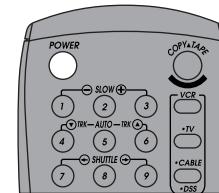


6 Turn On TV

Press the power button on the TV.

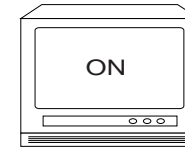

7 Tune TV to Channel 3 or 4

Be sure to use the same channel you used in Step 3.

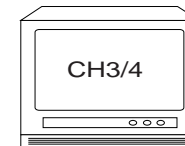

8 Basic Connection is Complete!

The Language menu will appear on your television screen. Please proceed with Auto Setup in Chapter 2.




2 - Initial Settings

Auto Setup

The first time you hook up and turn on your Dual-Deck VCR, it will run Auto Setup. First, you will be prompted to select the on-screen language, then the Dual-Deck VCR will automatically search for channels and set the VCR's internal clock.

1 Set Language

Press 1, 2, or 3 to select English, French, or Spanish. To change the language at any other time, see page 6.

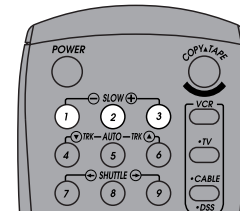

2 Run Auto Setup

As soon as you set the language, the VCR will automatically perform the following steps:

- **Auto Channel Search** — Automatically detects whether you have an antenna or cable, then searches for all channels in your area. If Auto Setup is unable to search for channels in your area, you may do so at any time; see page 30.
- **Auto Time Set** — Sets the VCR's internal clock. If Auto Setup is unable to find a clock set channel in your area, you can set the clock manually; see page 7.

This procedure may take a few minutes to complete, at which point it will tune the VCR to the lowest channel found.

**Searching for Channels
And Setting Clock**

Please Wait . . .

Auto Setup is Complete!


Proceed to Chapter 3 for an overview of the Dual-Deck System.

Set Language Manually

If you want to change the on-screen language at any time, follow these steps.

1 Open "Main Menu"


Press the menu button on the remote control.

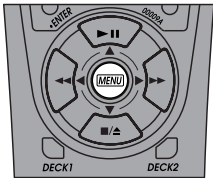

MAIN MENU	
1 → EZ Copy	Off
2 : Child Lock	Off
3 : Timer Recording	
4 : B-Scene Edit List	
5 : Setup Title Message	
6 → Language/Langue/Idioma	
↑ / ↓ To Move	→ To Select
MENU to Quit	
Hold MENU Key For Setup	

2 Select On-Screen Language

Press 6 repeatedly to cycle among English, French, and Spanish. As you do this, the entire Main Menu will be translated into English, French or Spanish.

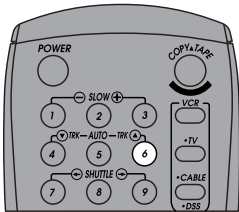

MAIN MENU	
1 : EZ Copy	Off
2 : Child Lock	Off
3 : Timer Recording	
4 : B-Scene Edit List	
5 : Setup Title Message	
6 → Language/Langue/Idioma	
↑ / ↓ To Move	→ To Select
MENU to Quit	
Hold MENU Key For Setup	

English

MENU PRINCIPAL	
1 : Copie facile	non
2 : Contrôle d'enfant	non
3 : Enreg. programmable	
4 : Montage de 8 scènes	
5 : Titres à l'écran	
6 → Language/Langue/Idioma	
↑ / ↓ Choisir	→ Changer
MENU = Fin	
MENU pendant 3s = Réglages	

French

MENU PRINCIPAL	
1 : Copiar fácilmente	no
2 : Seguridad de niños	no
3 : Grabación programada	
4 : Montaje de 8 escenas	
5 : Titulos de crédito	
6 → Language/Langue/Idioma	
↑ / ↓ Cambiar	→ Elegir
MENU = Salir	
MENU por 3 seg. = Ajustes	



Spanish

Set Clock Manually

If Auto Clock Set is not available in your area, follow these steps to set the clock manually. If Auto Clock Set has set the time incorrectly, try adjusting Daylight Savings Time (page 9) and Time Zone (page 10) before setting the clock manually.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

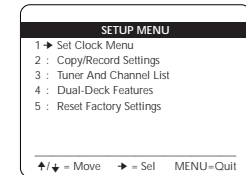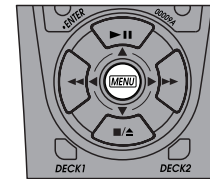



2 Select "Set Clock Menu"

Press 1.

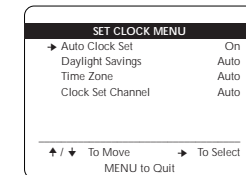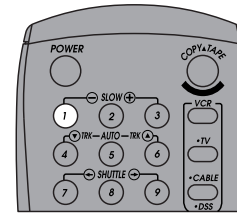



3 Turn Off "Auto Clock Set"

Press the right arrow key once. "Set Clock" will replace "Time Zone" and "Clock Set Channel."

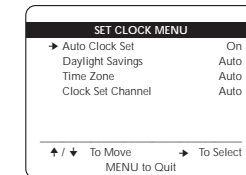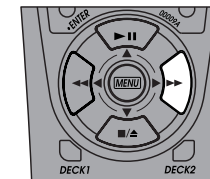

4 Choose "Set Clock"

Press the down arrow key until "Set Clock" is selected, then press the right arrow key to select.

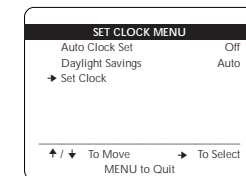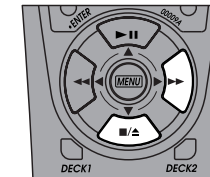


Y2K Compliant

Go-Video Inc. hereby certifies that this Dual-Deck VCR is fully compliant with the calendar year 2000. Note that the year 2000 is a leap year.

5 Set the Time

Use the number keys or the up/down arrow keys to adjust the following items. To skip an item, press the right arrow key:

- **Set Month** — Enter the month as a 2-digit number; i.e. August = "08"
- **Set Year** — Enter the year as a 2-digit number; i.e. 1999 = "99"
- **Set Day** — Enter the day as a 2-digit number; i.e. the ninth = "09"
- **Set Hour** — Enter the hour as a 2-digit number; i.e. 12:xx = "12"
- **Set Minute** — Enter the minute as a 2-digit number; i.e. xx:25 = "25"
- **Set AM/PM** — Press "1" for AM, "2" for PM

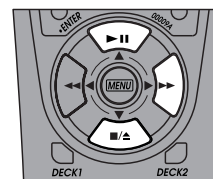


SET MONTH [1-12] : 08							
Aug 1998				12:25 PM			
Su	Mo	Tu	We	Th	Fr	Sa	
						1	
2	3	4	5	6	7	8	
9	10	11	12	13	14	15	
16	17	18	19	20	21	22	
23	24	25	26	27	28	29	
30	31						
→ To Set				MENU to Quit			

SET MONTH [01-12]
SET YEAR [00-99]
SET DAY [01-31]
SET HOUR [01-12]
SET MINUTE [00-59]
SET AM/PM [1/2]

6 Save Settings

The Clock is set! Press the Menu button at any time to save and quit.


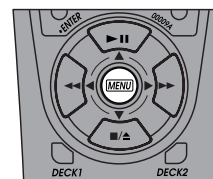


Set Daylight Savings Time

From the Set Clock Menu, you may also choose to manually set Daylight Savings, Time Zone, or Auto Clock Set channel.



1 Open the "Setup Menu"

Press and hold the menu button for 3 seconds.

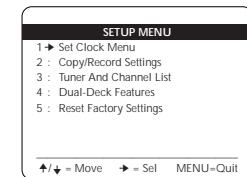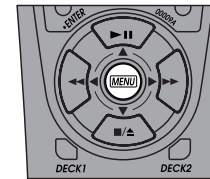



2 Select "Set Clock Menu"

Press 1.

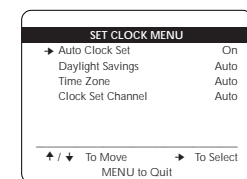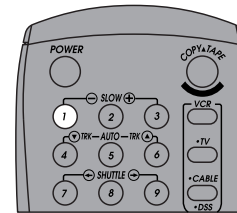

3 Choose "Daylight Savings"



Press the down arrow key until "Daylight Savings" is selected.

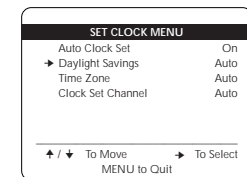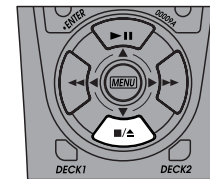

4 Set "Daylight Savings"

Press the right arrow key to select among:

- **Auto** — Uses local channel info to determine Daylight Savings Time status.
- **Off** — Turns off Daylight Savings permanently, i.e. the time never changes.
- **On** — Enables Daylight Savings at 2:00 AM on the first Sunday of April and disables it at 2:00 AM on the last Sunday in October.

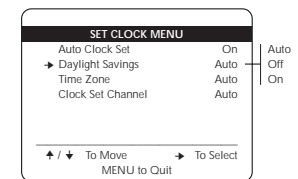
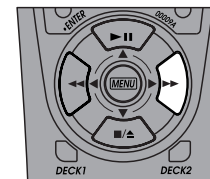


Set Time Zone

You can set your Time Zone manually to one of the six preset choices. Use this feature if Auto Clock Set has set the time incorrectly by detecting a nearby time zone. Note: If you are an Arizona resident, choose Mountain Standard Time and turn Daylight Savings Time off.



1 Open the "Setup Menu"

Press and hold the menu button for 3 seconds.

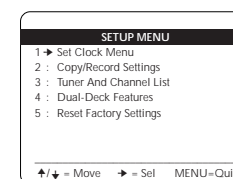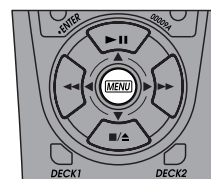



2 Select "Set Clock Menu"

Press 1 or press the Set Timer button.

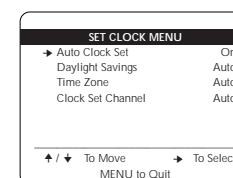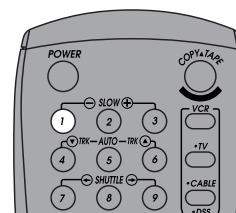

3 Select "Time Zone"



Press the down arrow key until "Time Zone" is selected.

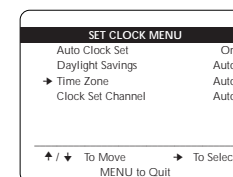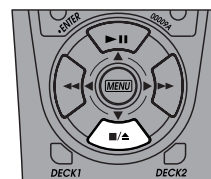

4 Set "Time Zone"

Press the right arrow key to select among:

- **Auto** — Sets Time Zone automatically
- **Eastern** — Eastern Standard Time
- **Central** — Central Standard Time
- **Mountain** — Mountain Standard Time
- **Pacific** — Pacific Standard Time
- **Alaska** — Alaska Standard Time
- **Hawaii** — Hawaii Standard Time

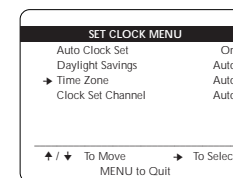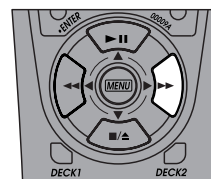



Auto
Eastern
Central
Mountain
Pacific
Alaska
Hawaii

Set Auto Clock Set Channel

If you know a station in your local area that broadcasts time information, you can set it manually. For example, your local PBS station usually will transmit the time and date. Use this feature only if Auto Clock Set has set the time incorrectly.



1 Open the "Setup Menu"

Press and hold the menu button for 3 seconds.

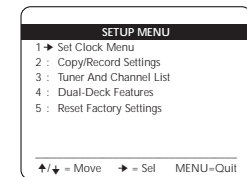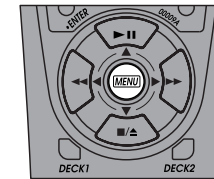



2 Select "Set Clock Menu"

Press 1.

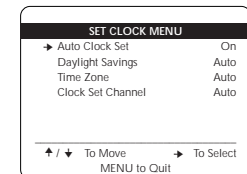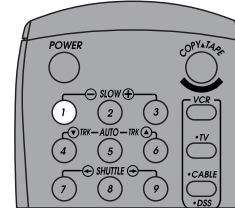

3 Select "Clock Set Channel"



Press the down arrow key until "Clock Set Channel" is selected.

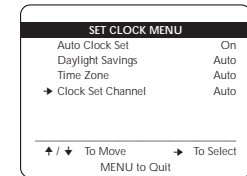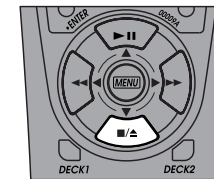

4 Set "Clock Set Channel"

Press the right arrow key repeatedly to select among:

- **Auto** — Automatically searches for channels broadcasting the time via XDS (Extended Data Services)
- **Ch ##** — Allow you to manually set a channel to receive XDS information
- **Aux** — allows the clock to be set from another AV (Audio/Video) device attached to your VCR's line inputs

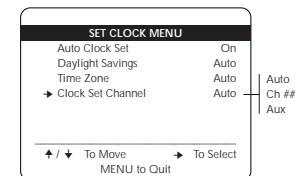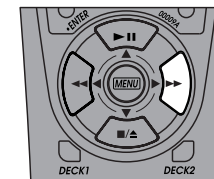

3 - The Dual-Deck System

Remote Control Overview

***Power** — Turns the VCR on and off. Note: Power will come on automatically when you insert a videotape.

Slow +/- — In Play mode, plays the tape at varying slow motion speeds.

***0-9** — Selects channels directly. In the Menu system, selects menu items.


Auto/ ▽ Trk ▲ — In Play mode, allows you to manually adjust tracking. Press Auto to resume Auto Tracking.

↔ Shuttle ↔ (see page 45) — In Play mode, Shuttle → gradually increases the cue speed from double-speed playback to picture search to jet search. Shuttle ← gradually slows down the tape, pauses, then goes into reverse picture search and reverse jet search.

***100+/Repeat** — Selects cable channels 100 and up; in Play mode, replays the last 30 seconds of tape.

***LCV (Last Channel Viewed)** — Displays the last channel you were watching.

*These keys can be used to operate your TV, VCR, Cable Box, or Satellite receiver; see Appendix A to program your remote control.

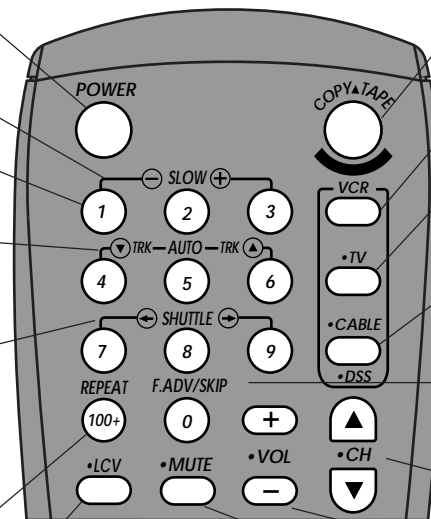

Top Section

Copy Tape — Copies the tape in Deck 1 to the tape in Deck 2.

VCR — Sets the remote to operate your VCR.

TV — Sets the remote control to operate your television. To program the remote, see Appendix A.

Cable/DSS — Sets the remote to operate your Cable Box or Digital Satellite System (DSS).

F.Adv/Skip — In Pause mode, advances the tape one frame for every press. In Play mode, jumps ahead one minute for every press (up to 5). In Copy mode, skip edits one minute for every press (up to 5).

***Ch +/-** — Changes channels up and down.

***Vol +/-** — Turns the sound up and down.

***Mute** — Turns audio on and off.

TV View — Switches the TV display among the Tuner, Deck 1, Deck 2, and Aux. This allows you to rotate through all your input sources—TV shows, videos, DVD players, etc.—at the touch of a button.

Scene/Title — Marks the beginning and ending edit points of scenes in the 8-Scene Editor. Also press to record On-Screen Titles (see page 70).

Rec — Starts recording if Deck 2 is selected. Press twice to activate One-Touch Recording.

SP/SLP•Enter — Sets the record speed to SP (Standard Play) or SLP (Super Long Play). SLP is three times longer than SP. Also performs the same function as the Enter key on your Cable Box remote.

Set Timer — Opens the Timer Recording menu.

Rew — When the tape is stopped, rewinds the tape. When the tape is playing, visually searches the tape in reverse (Review).

Deck1 — Sets Deck 1 as the active deck. All deck control buttons (Play, Rewind, etc.) will only affect Deck 1.

Search/Index — From Stop, Play, F.Forward, or Rewind, opens the Search/Index Menu. While recording, places an Index Mark on the tape.

Clear — Resets the Tape Counter to 0:00:00. In the menu system, it clears entries.

Display — Turns the On-Screen Display (tuner, audio, and deck status) on and off.

CLK/CTR — Switches the Front Panel Display among clock, tape counter, and time remaining.


Play/Still — Plays the tape. In Play or Record mode, pauses the tape in the source deck.

F.F. — When the tape is stopped, fast-forwards the tape. When the tape is playing, Visually searches the tape forward (Cue).

Menu — Opens the Main Menu. Press and hold for three seconds to open the Setup Menu

Stop/Eject — Stops the tape in the active deck. Press twice to eject the tape.

Deck2 — Sets Deck 2 as the active deck. All deck control buttons (Play, Rewind, etc.) will only affect Deck 2.

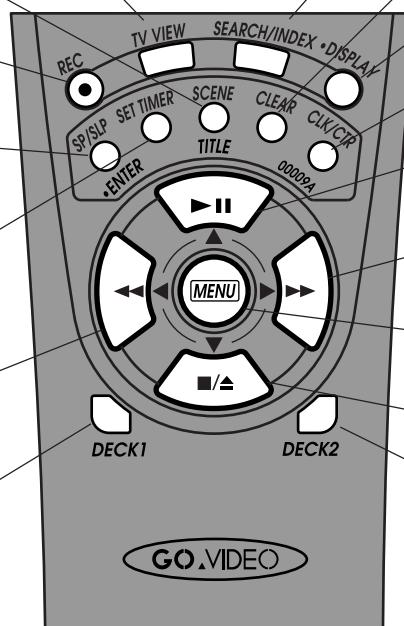

Deck Control Section

Front Panel Overview

Power — Turns the VCR on and off. Note: Power will come on automatically when you insert a videotape.

Pause — Pauses the tape in the active deck.

Play — Plays the tape in the active deck. Press twice for double-speed playback. In menus, moves selection arrow up.

Record — Starts recording if Deck 2 is selected. Press repeatedly to activate One-Touch Recording.

TV/VCR — Switches between the TV's tuner and the VCR's tuner.

Copy Tape — Copies the tape in Deck 1 to Deck 2.



Stop/Eject — Stops the tape in the active deck. Press twice to eject the tape. In menus, moves selection arrow down.

Rewind — In Stop mode, rewinds the tape. In Play mode, visually searches the tape in reverse (Review). In menus, backs up one menu.

F. Forward — In Stop mode, fast-forwards the tape. In Play mode, visually searches the tape forward (Cue). In menus, selects and cycles through menu items.

Deck Select — Switches control between Deck 1 and Deck 2.

Menu — Opens the Main Menu. Press and hold for 3 seconds to open the Setup Menu.


Channel Up/Down — Changes channels up and down.

Front Panel Inputs

Use the Front Panel Inputs for easy connection to a camcorder or video game. The front panel inputs are referred to as Aux throughout the menu system.

Video Line Input — (Yellow)
Use to connect the video signal from your external device with an RCA cable.

Audio Right Input — (Red) Use to connect the right audio signal from your external device with an RCA cable.

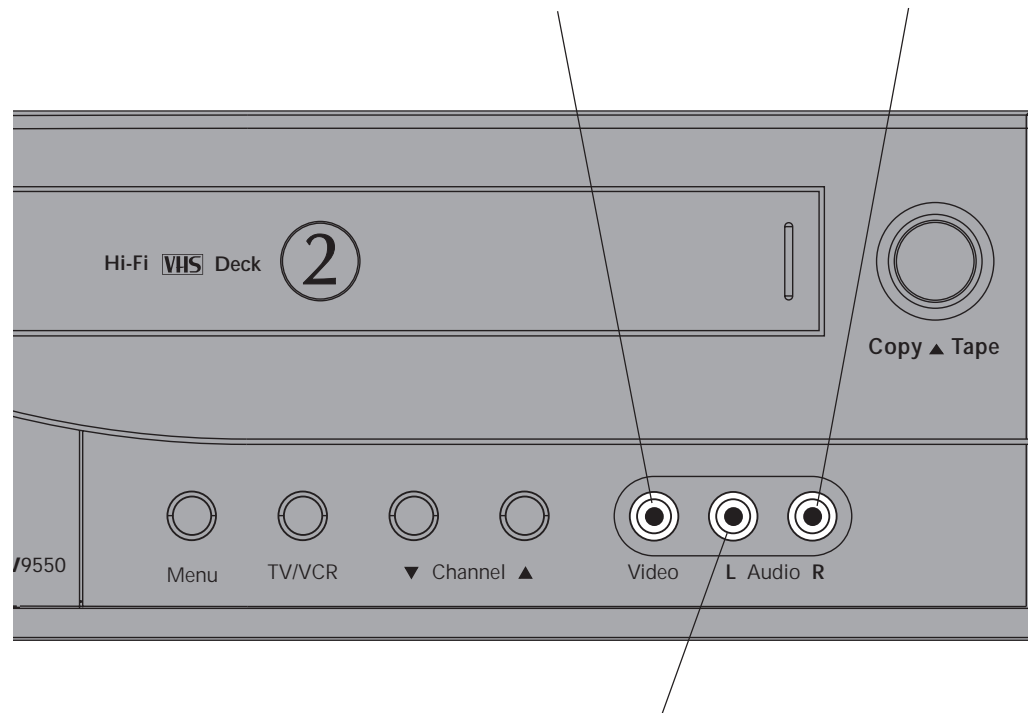

Audio Left Input — (White) Use to connect the left audio signal from your external device with an RCA cable. Connect monaural (mono) audio sources here.

Front Panel Display

VCR — Lights to show you that the Dual-Deck is in VCR mode; i.e. what you see on screen is coming from the VCR and NOT the television, as set by the TV/VCR button on the front panel.

Timer — Lights to show you that a Timer Recording is stored in memory. Blinks if there is a Timer Recording error.

Copy — Lights to show you that a tape is being copied. Blinks if the Copy is Paused.


Hi-Fi — Lights when a videotape is playing in Hi-Fi stereo sound.

SAP — Lights when a Second Audio Program, usually a second language, is available for the current tuner channel.

Stereo — Lights when the tuner channel is being broadcast in stereo.

Deck One — Lights to show you that Deck One is active.

Deck Two — Lights to show you that Deck 2 is active.

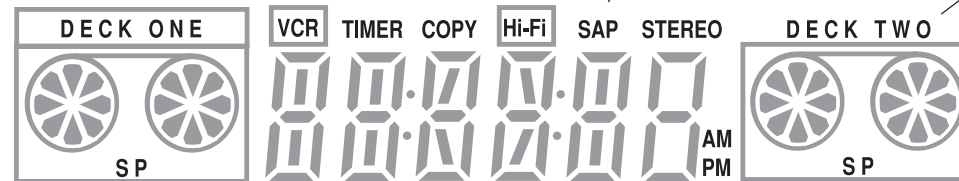

Deck One Tape Status — Graphically shows you the status of the tape in Deck 1; i.e. Stop, Play, Rewind, etc.

Tape Speed — (SP, SLP) Shows you the current Playback Speed for Deck 1.

00:00:00 — Shows you the current time, the tape counter, or the time remaining until the end of the tape in the active deck, as set by the CLK/CTR button. Also briefly displays the active deck function (Stop, Play, Rewind, etc.).

Tape Speed — (SP, SLP) Shows you the current Playback or Record Speed for Deck 2.


Deck Two Tape Status — Graphically shows you the status of the tape in Deck 2; i.e. Stop, Play, Rewind, etc.

Front Panel Display Settings

You can set the Front Panel Display to dim at night so it doesn't keep you awake.

1 Open "Setup Menu"


Press and hold the menu button for 3 seconds.

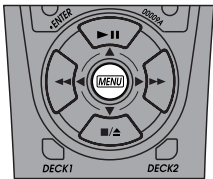

SETUP MENU	
1 →	Set Clock Menu
2 :	Copy/Record Settings
3 :	Tuner And Channel List
4 :	Dual-Deck Features
5 :	Reset Factory Settings
↑/↓ = Move → = Sel MENU=Quit	

2 Select "Dual-Deck Features"

Press 4.

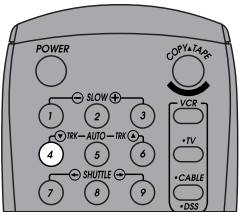


DUAL-DECK FEATURES	
1 →	Remote Eject On
2 :	Playback Mode Normal
3 :	Auto Play / Rewind Both
4 :	Panel Display Auto
5 :	Screen Display Auto
6 :	Deck1 Hi-Fi On
7 :	Deck2 Hi-Fi On
↑/↓ = Move → = Sel MENU=Quit	

3 Set "Panel Display"

Press 4 repeatedly to turn Panel Display to:

- **Auto** — Dims automatically between 10:00 PM and 6:00 AM
- **On** — Makes Front Panel Display bright at all times.
- **Off** — Disables Front Panel Display

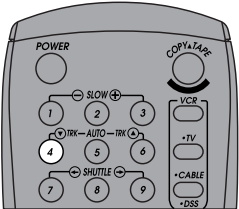



DUAL-DECK FEATURES	
1 :	Remote Eject On
2 :	Playback Mode Normal
3 :	Auto Play / Rewind Rew
4 →	Panel Display Auto
5 :	Screen Display Auto
6 :	Deck1 Hi-Fi On
7 :	Deck2 Hi-Fi On
↑/↓ = Move → = Sel MENU=Quit	

Child Lock

To prevent children from using the VCR when you are away, you can activate the Child Lock. This feature disables Auto Power On, Auto Play, and all front panel buttons. You will need the remote control to operate the VCR.

1 Open "Main Menu"



Press the Menu button on the remote control.

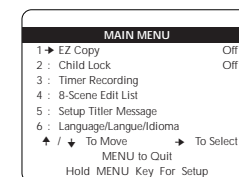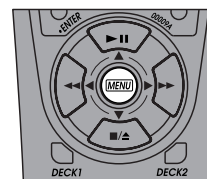

2 Set "Child Lock"

Press 2 repeatedly to turn Child Lock on or off. With Child Lock set to "On":

- The VCR will not power on automatically when a tape is inserted.
- Tapes will not play automatically when you insert them, regardless of the Auto Play setting (see page 48).
- All front panel buttons are disabled.
- You will still be able to use the remote control to operate all VCR functions.

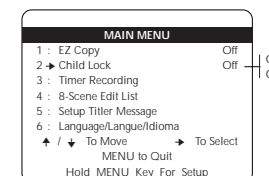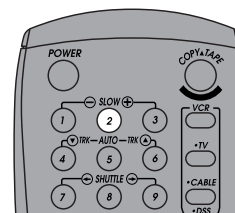


Remote Eject

Remote Eject allows you to eject tapes by pressing Stop on the remote control.

1 Open "Setup Menu"


Press and hold the menu button for 3 seconds.

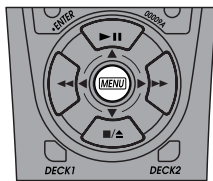

SETUP MENU	
1 →	Set Clock Menu
2 :	Copy/Record Settings
3 :	Tuner And Channel List
4 :	Dual-Deck Features
5 :	Reset Factory Settings
↑/↓ = Move → = Sel MENU=Quit	

2 Select "Dual-Deck Features"


Press 4.

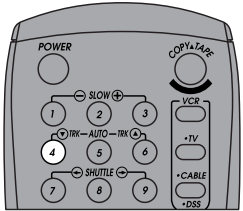

DUAL-DECK FEATURES	
1 →	Remote Eject On
2 :	Playback Mode Normal
3 :	Auto Play / Rewind Both
4 :	Panel Display Auto
5 :	Screen Display Auto
6 :	Deck1 Hi-Fi On
7 :	Deck2 Hi-Fi On
↑/↓ = Move → = Sel MENU=Quit	

3 Set "Remote Eject"

Press 1 repeatedly to turn Remote Eject on or off. The default setting is "On."

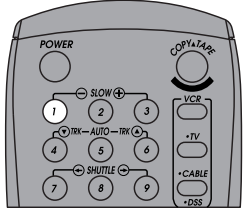


DUAL-DECK FEATURES	
1 →	Remote Eject On
2 :	Playback Mode Normal
3 :	Auto Play / Rewind Rew
4 :	Panel Display Auto
5 :	Screen Display Auto
6 :	Deck1 Hi-Fi On
7 :	Deck2 Hi-Fi On
↑/↓ = Move → = Sel MENU=Quit	


On
Off

- **Main Menu** — for everyday functions, like EZ Copy, Child Lock, and Timer Recording.
- **Setup Menu** — for seldom used “set and forget” options, like Set Clock, Copy/Record Settings and Tuner and Channel List (see page 22).

- **Main Menu** — for everyday functions, like EZ Copy, Child Lock, and Timer Recording.
- **Setup Menu** — for seldom used “set and forget” options, like Set Clock, Copy/Record Settings and Tuner and Channel List (see page 22).

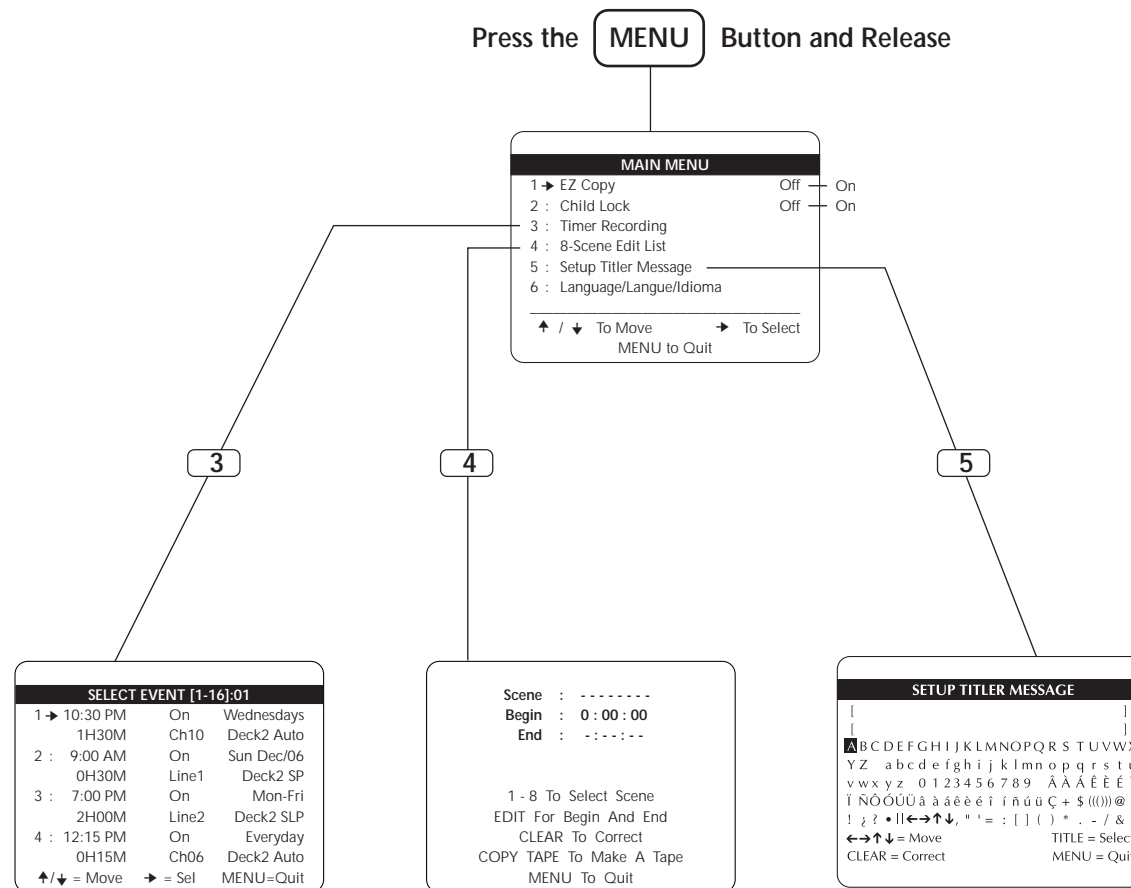

Setup Menu Tree

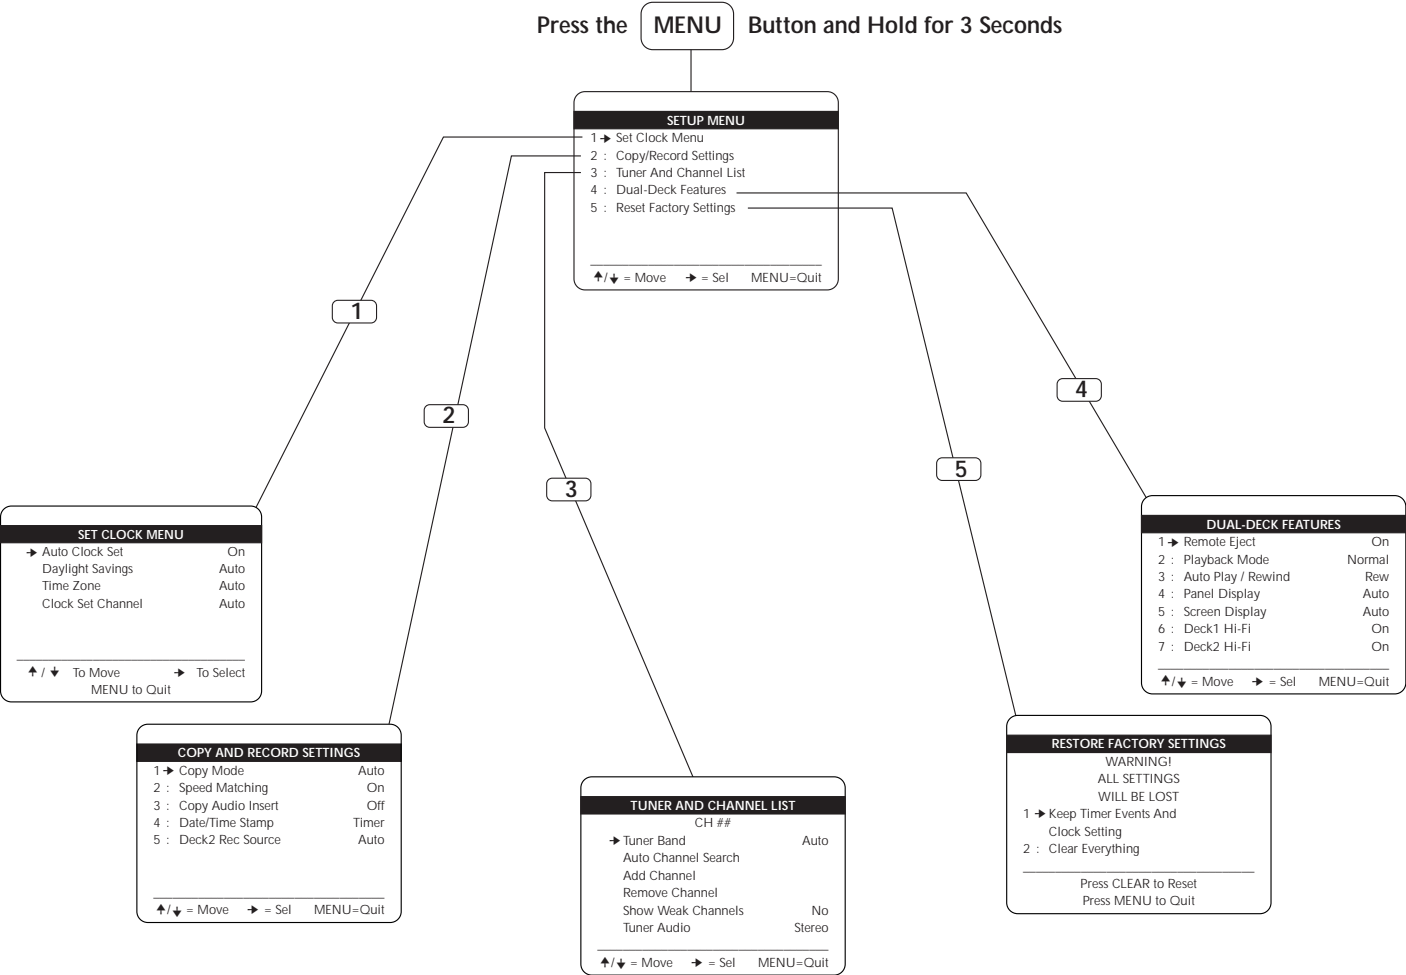


Menu Navigation - Remote Control

Use the following buttons to enter and navigate within the menu system.


Menu

Press and release to enter the Main Menu and adjust everyday functions. When you are in the menu system, press to save settings and exit.

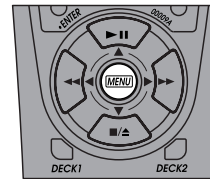


Right Arrow

Selects and cycles through menu items.

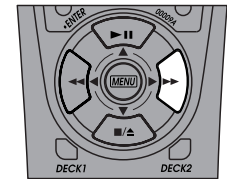


Menu (3 seconds)

Press and hold for 3 seconds to enter the Setup Menu and adjust "set and forget" functions.

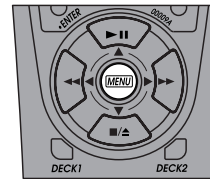


0-9

Direct method of selecting and changing menu items (used in the examples throughout this manual).

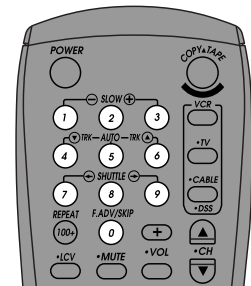

Up/Down Arrows

Moves up or down the list of menu items.

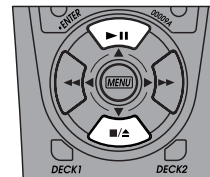


Clear

Cancels certain selections in the menus.



Left Arrow

When you are in the menu system, press to back up to the previous menu.

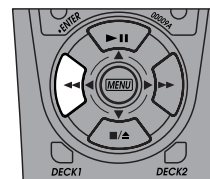

Menu Navigation - Front Panel

The following front panel buttons can also be used to enter and navigate within the menu system.


Menu

Press and release to enter the Main Menu and adjust everyday functions. When you are in the menu system, press to save settings and exit.



Menu (3 seconds)

Press and hold for 3 seconds to enter the Setup Menu and adjust “set and forget” functions.

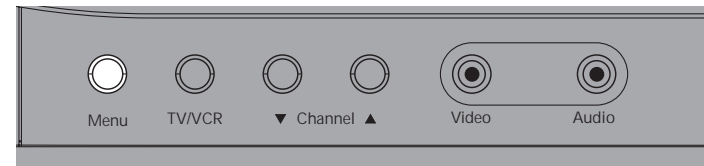

Stop/Eject & Play

Press Stop/Eject to move down and Play to move up the list of menu items.



Rewind

When you are in the menu system, press to back up to the previous menu.



F.Forward

Selects and cycles through menu items.





Reset Factory Settings

If you make changes to the Dual-Deck VCR default settings, you can always restore the original factory settings.



1 Open "Setup Menu"

Press and hold the Menu button on the remote control for 3 seconds.

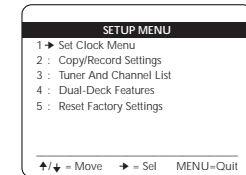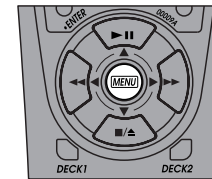



2 Select "Reset Factory Settings"

Press 5.

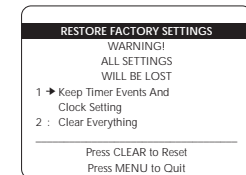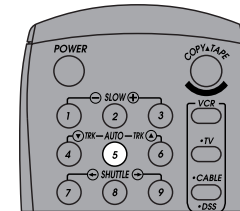



3 Decide What to Reset

Press 1 if you want to reset everything except the clock and any saved Timer Recordings.
Press 2 if you want to clear all settings.

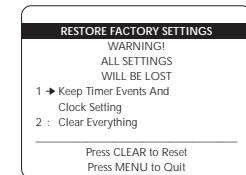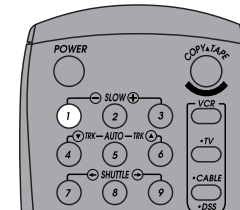

4 Restore Settings

 Press the Clear button to confirm your decision and restore factory settings.

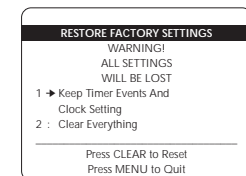



On-Screen Display Overview

The On-Screen Display (OSD) keeps you posted on the status of the Tuner, Decks, and Aux input. It also communicates important Copy, Timer Record, and Error messages.

Bring up On-Screen Display

 
Press Display. The OSD will also appear whenever you activate a Deck function, i.e. Play a tape, change channels, etc. The OSD will turn off automatically after 5 seconds.

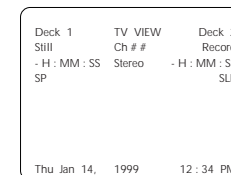

Change View

Press TV View to change the OSD among the 4 TV Views:

- Tuner
- Deck 1
- Deck 2
- Aux

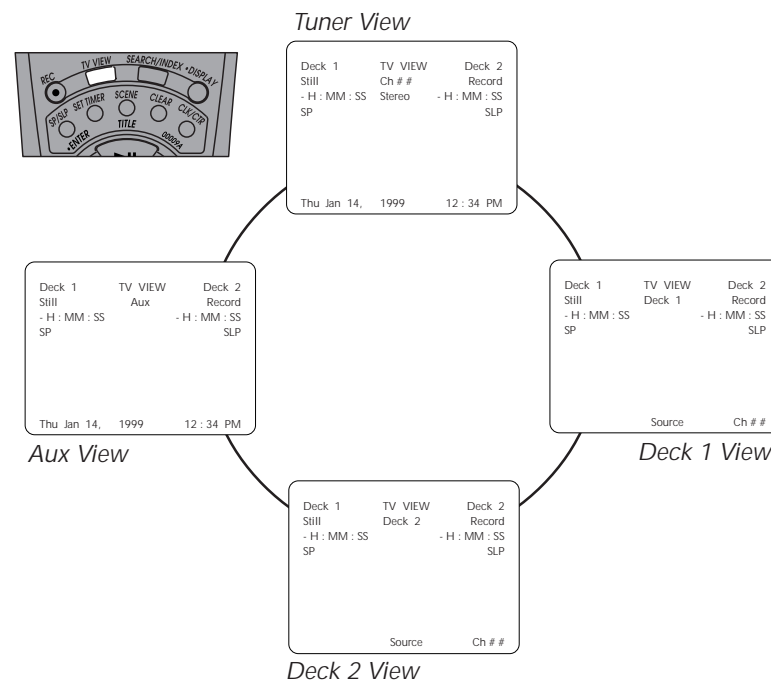

On-Screen Display Elements


TV View — Shows the source you are currently watching (Tuner, Deck 1, Deck 2, Aux). In Tuner View, shows the Channel Number.

Deck Counter Position— Shows the current tape position or time remaining as set by the Clk/Ctr button.

Deck 1 Play Speed— Shows current playback speed (SP, LP, SLP).

Audio Status — Shows the current audio source: stereo, mono, SAP, TV+SAP, Simul., or Mute.

Date and Time— In Tuner View, the Date and Time are displayed at the bottom of the screen.

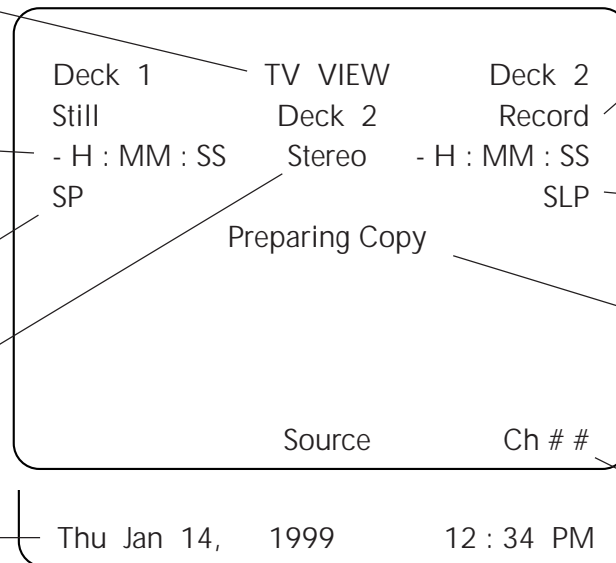

Deck Status — Shows current tape status in each deck: Stop, Play, Rew, FFwd, Eject, Cue, Review, Slow, Still, Pause, Rec, OTR, Index, ATR, or ERROR.

Deck 2 Play/Record Speed— Shows current playback speed (SP, LP, SLP) or record speed (SP, SLP).

Display Message — Provides feedback on your Dual-Deck, including Copy, Timer Recording, Sequential/Loop Play, and Error Messages.



Deck Record Source— In Deck 2 View, the record source is displayed at the bottom of the screen.

On-Screen Display (OSD) Settings

You can customize the OSD to show only Tuner information, only Deck information, or have it turned off at all times unless you press the Display key.



1 Open "Setup Menu"

Press and hold the Menu button on the remote control for 3 seconds.

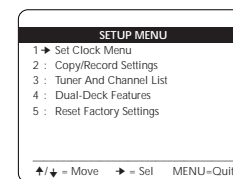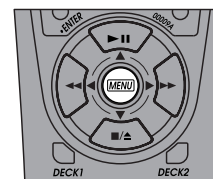

2 Select "Dual-Deck Features"



Press 4.

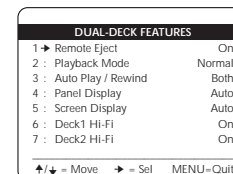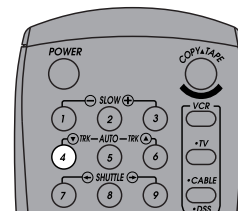

3 Set "Screen Display"

Press 5 repeatedly to turn Screen Display to:

- **Auto** — Default setting. This will bring up the OSD automatically whenever a Deck function is activated (i.e., Play, Stop, Channel +/-, etc.)
- **Tuner** — Only Tuner information will be displayed.
- **Deck** — Only Deck Status information will be displayed.
- **Off** — The OSD will be off permanently unless you press the Display button.

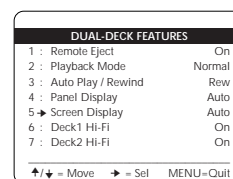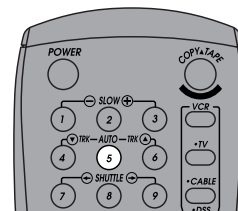



4 - Tuner & Channel List

Tuner Band

Broadcast television comes into your home in one of two ways: over the air via antenna, or through a cable via a local CATV (Community Antenna Television) provider or Satellite. The Tuner Band setting allows you to specify which source you are using. Use this setting only if Auto Setup detected the incorrect band, i.e. channels are coming in on the wrong channel numbers.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

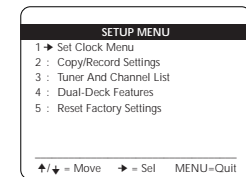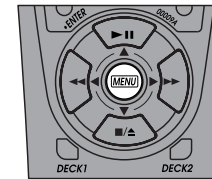

2 Select "Tuner & Channel List"



Press 3.

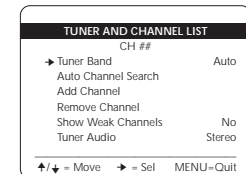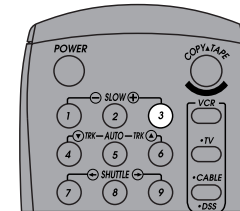

3 Set "Tuner Band "

Press the right arrow repeatedly to switch the Tuner Band among:

- **Auto** — Automatically detects Tuner Band.
- **Antenna** — Indicates that you are using an indoor or outdoor VHF/UHF antenna.
- **Cable** — Indicates that you are using CATV (Community Antenna Television), i.e. cable TV.

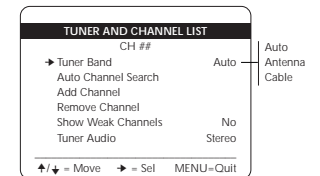
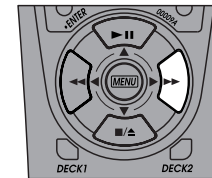


Auto Channel Search

You can perform Auto Channel Search at any time to store only those channels which are active in your area.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

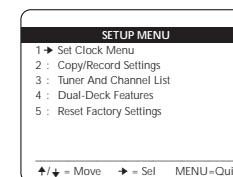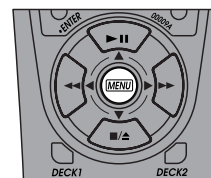



2 Select "Tuner & Channel List"

Press 3.

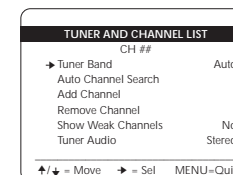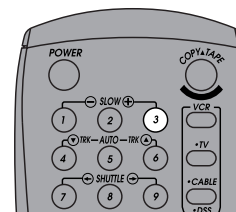



3 Select "Auto Channel Search"

Press the down arrow until Auto Channel Search is selected.

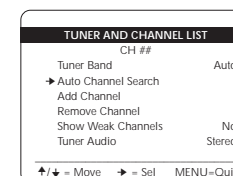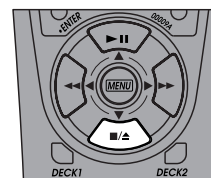

4 Start "Auto Channel Search"

Press the right arrow to begin searching for all available channels in the selected Tuner Band. This procedure may take a few minutes to complete. When Auto Channel Search is finished, it will display the lowest channel found.

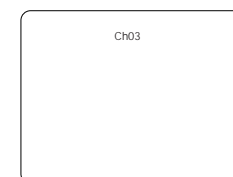
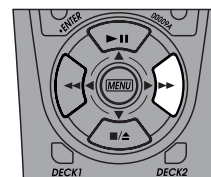


Add Channel

Follow these steps to add a channel that was not detected during Auto Channel Search.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

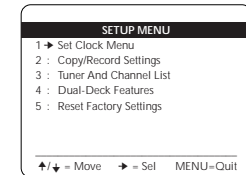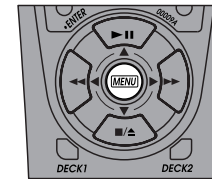



2 Select "Tuner & Channel List"

Press 3.

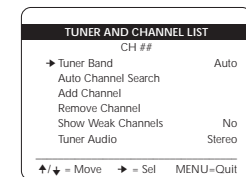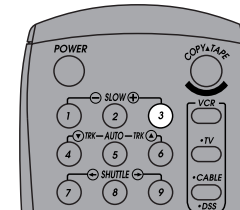



3 Select "Add Channel"

Press the down arrow until Add Channel is selected.

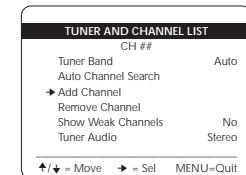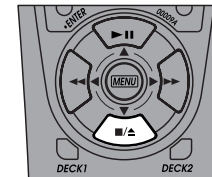



4 Tune the Channel

Use the number keys (0-9) to enter the channel number, e.g. "1-1" for Channel 11.

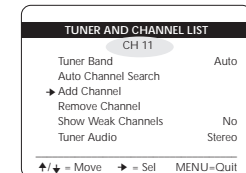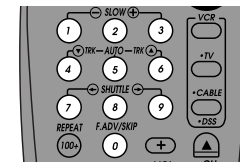

5 Add the Channel

Press the right arrow to add the channel to your channel list. Repeat steps 4 and 5 to add more channels.

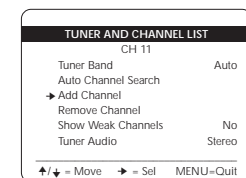
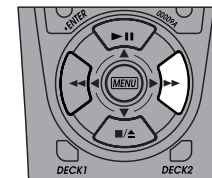


Remove Channel

Follow these steps to remove a channel that was stored during Auto Channel Search.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

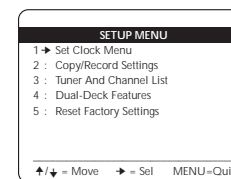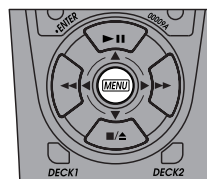



2 Select "Tuner & Channel List"

Press 3.

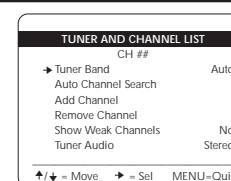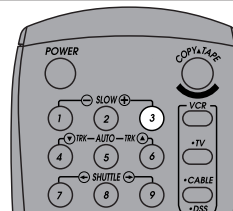



3 Select "Remove Channel"

Press the down arrow until Remove Channel is selected.

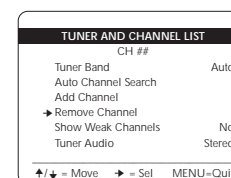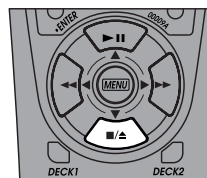



4 Tune the Channel

Use the Ch +/- buttons or the number keys (0-9) to enter the channel number.

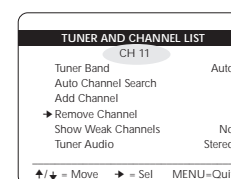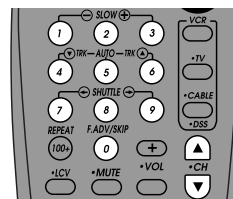

5 Remove the Channel

Press the right arrow to remove the selected channel from your channel list. Repeat steps 4 and 5 to remove additional channels.

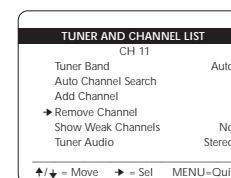
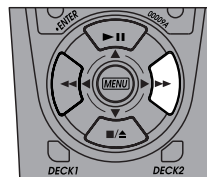


Show Weak Channels

When you run Auto Channel Search, it will skip channels with weak signals, i.e. poor picture quality. With Show Weak Channels, you can add more channels to your list by lowering the cut-off point at which a picture is acceptable to view.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

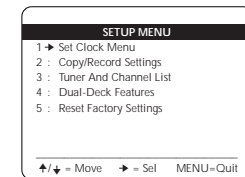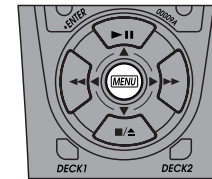



2 Select "Tuner & Channel List"

Press 3.

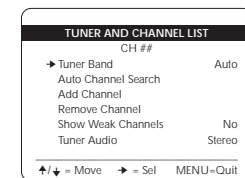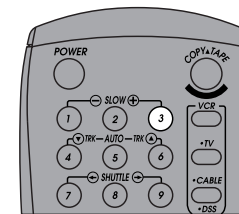



3 Select "Show Weak Channels"

Press the down arrow until Show Weak Channels is selected.

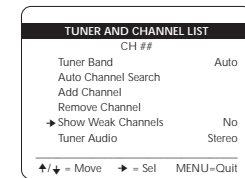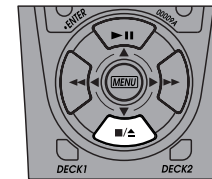

4 Set "Show Weak Channels"

Press the right arrow repeatedly to set Show Weak Channels to Yes or No.

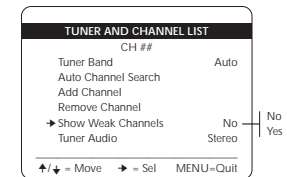
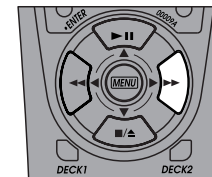


Tuner Audio

Most television programs are broadcast in stereo. However, in certain circumstances, you may wish to set the Tuner Audio to mono, SAP or TV+SAP.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

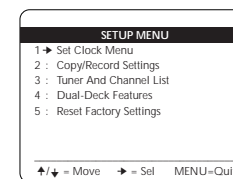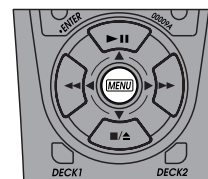



2 Select "Tuner & Channel List"

Press 3.

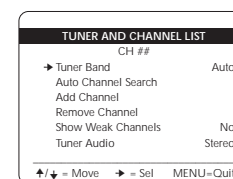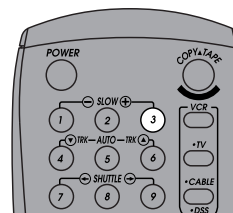

3 Select "Tuner Audio"



Press the down arrow until Tuner Audio is selected.

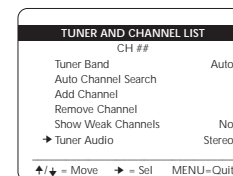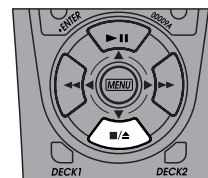

4 Set "Tuner Audio"

Press the right arrow repeatedly to set Tuner Audio to:

- **Stereo** — Two-channel Hi-Fi sound split into left and right channels. When a show is not broadcast in stereo, the sound reverts to Mono.
- **Mono** — Monaural, or single-channel, audio. Combines left and right audio signals. Use when connecting the VCR to a Mono output device, such as a monitor.

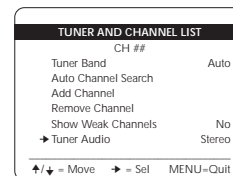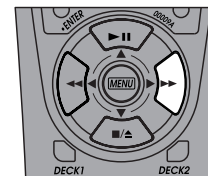

Stereo
Mono
SAP
TV + SAP

-
- **SAP** — Second Audio Program. Optional audio signal, often used to transmit a second language, news, or weather broadcasts. SAP will appear on the front panel display if it is available.
 - **TV+SAP** — Broadcasts Mono sound out of the left channel and SAP out of the right channel. This is useful if you want to listen to a second language with headphones while the primary language is played through the speakers.

5 - Copy Features

Basic Copying

To copy a tape, simply put your source tape in Deck 1, your blank tape in Deck 2, and press Copy Tape. The tape in Deck 1 will begin copying to Deck 2.

1 Insert Source Tape

Put the tape you wish to copy in Deck 1 on the left side of the VCR.



2 Insert Target Tape



Put your blank tape in Deck 2 on the right side of the VCR.



3 Copy Your Tape

Press the Copy Tape button on either the remote control or the front of the VCR. The tape in Deck 1 will begin copying to Deck 2.

- To pause copying, press Copy Tape.
- To resume copying, press Copy Tape again.
- To stop copying, press Stop/Eject on both decks; see Sync Editing on page 66.

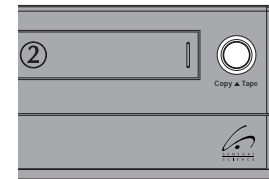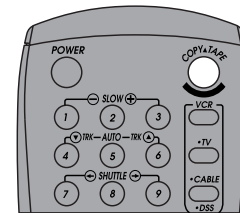


EZ Copy

EZ-Copy automates the entire copy process so you can copy an entire tape at the touch of a button. Just press the Copy Tape button, and the VCR will rewind both decks completely, copy the source tape to the target tape, rewind both decks again, and eject the tapes.

Complete Program Record
When EZ Copy is selected, the source tape begins to copy in SP; the VCR then calculates how much time is remaining on the target tape and adjusts the copy speed to SLP if necessary to copy the entire tape. If there is not enough room to copy the entire source tape, the VCR will copy in SLP until the end of the target tape is reached.

1 Open "Main Menu"

Press the Menu button on the remote control.

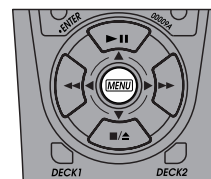


MAIN MENU	
1 → EZ Copy	Off
2 : Child Lock	Off
3 : Timer Recording	
4 : B-Scene Edit List	
5 : Setup Title Message	
6 : Language/Language/Idiom	
↕ / ↕ To Move	→ To Select
MENU to Quit	
Hold MENU Key For Setup	

2 Set "EZ Copy"

Press 1 repeatedly to turn EZ Copy on or off:

- **On** — When Copy Tape is pressed, both decks will rewind, the tape in Deck 1 will be copied to Deck 2, both decks will rewind again, and the tapes will be ejected.
- **Off** — When Copy Tape is pressed, the tape in Deck 1 will begin copying to Deck 2 immediately from the current position of both decks. To stop copying, activate Deck 2 and press Stop. The tapes will not be rewound or ejected.

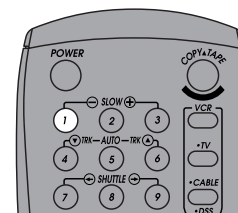

MAIN MENU	
1 → EZ Copy	Off
2 : Child Lock	Off
3 : Timer Recording	
4 : B-Scene Edit List	
5 : Setup Title Message	
6 : Language/Language/Idiom	
↕ / ↕ To Move	→ To Select
MENU to Quit	
Hold MENU Key For Setup	



Note: If the target tape ends before the source tape, neither tape will rewind to alert you that a problem occurred.

Copy Mode

There are two methods of copying a tape from Deck 1 to Deck 2: HQ1 (High Quality 1) and HQ2 (High Quality 2). HQ1 is best if your source tape is recorded in SP. HQ2 is best if your source tape is recorded in LP or SLP. The Auto setting will make this choice for you.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

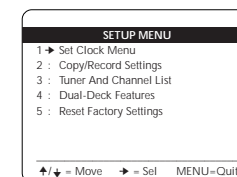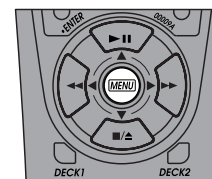

2 Select "Copy/Record Settings"



Press 2.

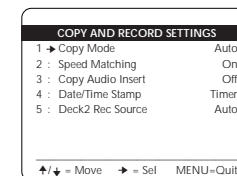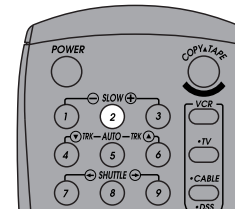

3 Set "Copy Mode"

Press 1 repeatedly to set Copy Mode to:

- **Auto** — Automatically sets the Copy Mode.
- **HQ1** — High Quality 1. Best if source tape is in SP.
- **HQ2** — High Quality 2. Best if source tape is in LP or SLP.

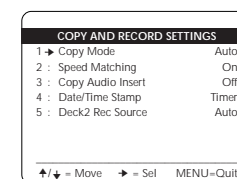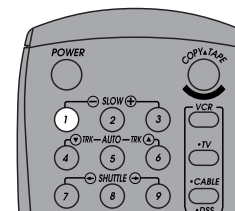



Auto
HQ1
HQ2

Speed Matching

Speed Matching automatically sets the Deck 2 record speed to be the same as the Deck 1 playback speed when copying a tape. You will typically get the best results with this feature turned on. You must disable this feature to copy multiple movies onto a single blank tape.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

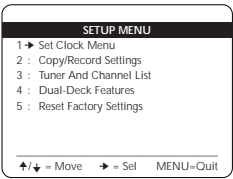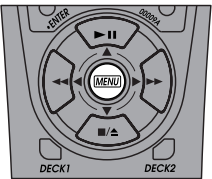



2 Select "Copy/Record Settings"

Press 2.

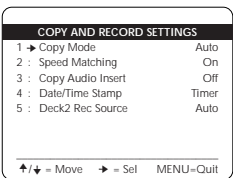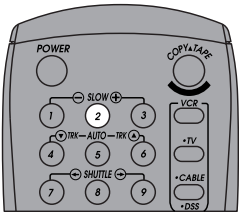

3 Set "Speed Matching"

Press 2 repeatedly to turn Speed Matching on or off. Turn Speed Matching off only if you want to record two or three SP tapes onto one SLP tape. If you do this, you will need to set the Record Speed manually using the SP/SLP button on the remote control (see page 54).

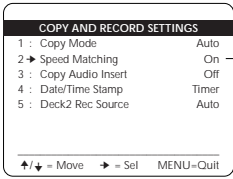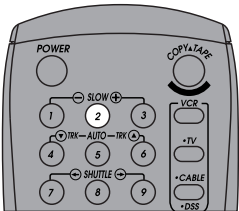



On
Off

Copy Audio Insert

You can insert a new audio track, such as music or voice-overs, while you are copying a tape.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

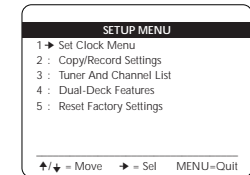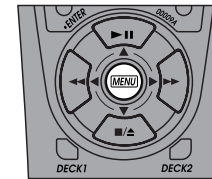

2 Select "Copy/Record Settings"



Press 2.

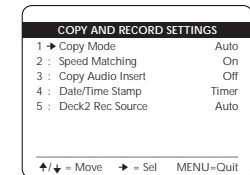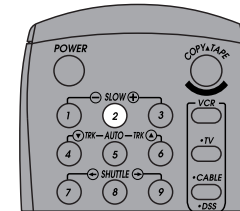

3 Set "Copy Audio Insert"


Press 3 repeatedly to set Copy Audio Insert to:

- **Off** — Copy Audio Insert is disabled.
- **Aux** — During Copy Tape session, audio will be recorded from a device connected to the front audio jacks.

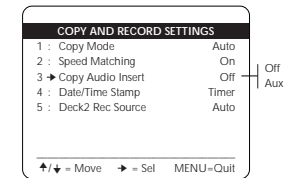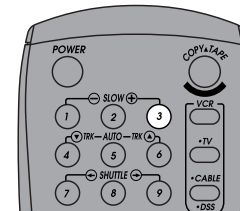

4 Connect Audio Source

Connect the external audio source to the front audio inputs (Aux).

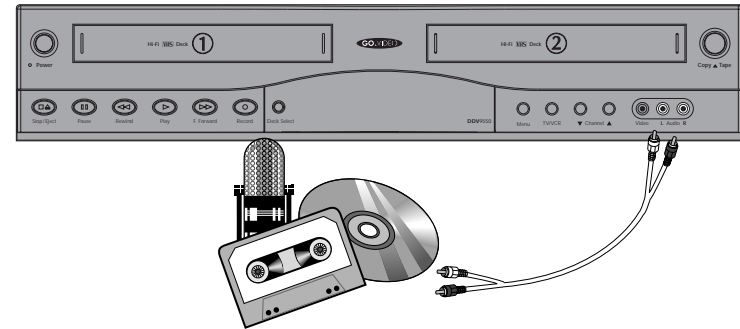


5 Copy New Audio Track

Insert tapes in both decks and press Copy Tape. At the same time, play the audio source.

Notes:

- The new audio signal replaces the tape's original audio track.
- If there is no audio source playing, the audio track will be blank.
- Copy Audio Insert automatically reverts to off when the VCR is turned off.

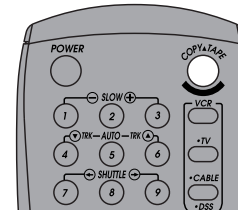


6 - Playback Features

Basic Playback

To play a videotape, simply insert it in either deck and press the Play button.

1 Insert Tape

Insert a standard VHS tape into Deck 1 or Deck 2.

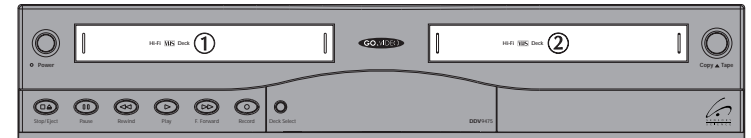


2 Play Tape

Press Play on the remote control or the front panel.

Notes:

- If Auto Play is on and the tape is missing the Record Safety Tab, the tape will begin to play automatically; see page 48.

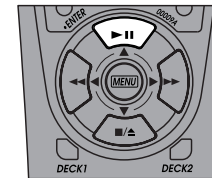

Or




Special Playback Features

While a tape is playing, you can enjoy a variety of special playback features, including Freeze, Skip, Slow Motion, and more. Press the Play button again to resume normal playback.

Freeze Frame

From Play mode, press Play/Still to freeze a single frame.

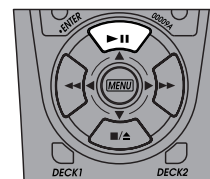


Frame Advance

From Still mode, press F.Adv/Skip to advance to the next frame.



Slow Motion


From Play mode, press Slow +/- for Slow Motion playback at variable speeds.

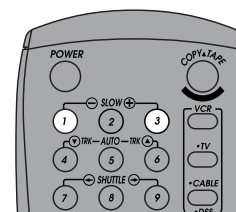

Cue

From Play mode, press F.Forward to cue at two speeds:


- **Picture Search** — Press and release F.Forward to advance the tape at 5 times normal speed.
- **Jet Search** — Press and hold F.Forward to advance the tape at 9 times normal speed.

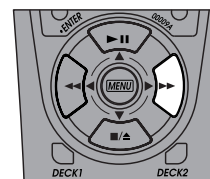

Review

From Play mode, press Rewind to review at two speeds:

- **Picture Search** — Press and release Rewind to review the tape at 5 times normal speed.
- **Jet Search** — Press and hold Rewind to review the tape at 9 times normal speed.

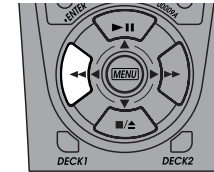

Skip

From Play mode, press F.Adv/Skip repeatedly up to 5 times to cue ahead 1-5 minutes.




Repeat

From Play mode, press Repeat to review the last 30 seconds of tape.



Shuttle

From Play mode, Shuttle → gradually increases the cue speed from Double-Speed playback to Picture Search to Jet Search. Shuttle ← gradually slows down the tape, Pauses, then goes into Reverse Picture Search and Reverse Jet Search.

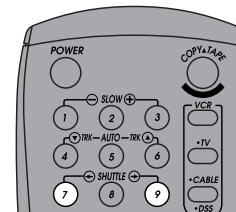


Tracking

Adjusting the Tracking removes the lines that sometimes appear during playback because of slight differences in recording decks. Your Dual-Deck VCR will automatically align the recorded tracks with the playback heads to solve this problem. You may also set tracking manually.



1 Adjust Tracking Manually

Press the Tracking up/down arrow keys to move the white lines out of the picture.

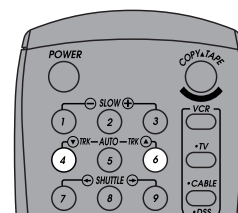

2 Resume Auto Tracking

While your tape is playing, press Auto to have the VCR adjust tracking automatically. ATR will flash on the on-screen display.

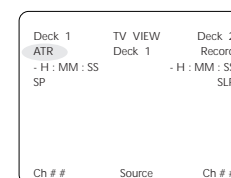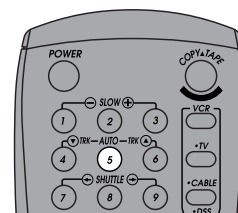


Sequential/Loop Playback

You can insert two tapes in your Dual-Deck VCR and have them play sequentially or in a continuous loop. For example, you may rent a movie that comes on two videotapes and watch them seamlessly one after the other. You may also set two sales or training tapes to loop continuously.

1 Open "Setup Menu"


Press and hold the menu button on the remote control for 3 seconds.

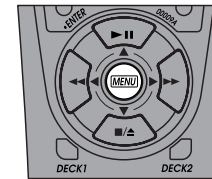

SETUP MENU	
1 → Set Clock Menu	
2 : Copy/Record Settings	
3 : Tuner And Channel List	
4 : Dual-Deck Features	
5 : Reset Factory Settings	
↑/↓ = Move → = Sel MENU=Quit	

2 Select "Dual-Deck Features"

Press 4.

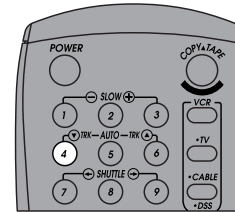


DUAL-DECK FEATURES	
1 → Remote Eject	On
2 : Playback Mode	Normal
3 : Auto Play / Rewind	Both
4 : Panel Display	Auto
5 : Screen Display	Auto
6 : Deck1 Hi-Fi	On
7 : Deck2 Hi-Fi	On
↑/↓ = Move → = Sel MENU=Quit	

3 Set "Playback Mode"

Press 2 repeatedly to set Playback Mode to:


- **Normal** — Tapes play normally (default setting).
- **Seq** (Sequential) — The tape in Deck 1 will play to the end, then the tape in Deck 2 will play to the end.
- **Loop** — The tape in Deck 1 will play to the end, then the tape in Deck 2 will play to the end. While Deck 2 is playing, the tape in Deck 1 will rewind to the beginning. This process will repeat continuously until you press Stop on the deck in Play.

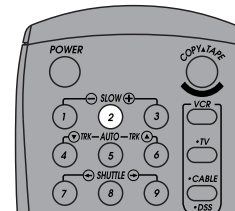

DUAL-DECK FEATURES		
1 : Remote Eject	On	
2 → Playback Mode	Normal	Normal
3 : Auto Play / Rewind	Both	Seq
4 : Panel Display	Auto	Loop
5 : Screen Display	Auto	
6 : Deck1 Hi-Fi	On	
7 : Deck2 Hi-Fi	On	
↑/↓ = Move → = Sel MENU=Quit		

Auto Play/Rewind


Auto Play will play tapes without Record Safety Tabs automatically when they are inserted. Auto Rewind will rewind tapes when they reach the end during playback.

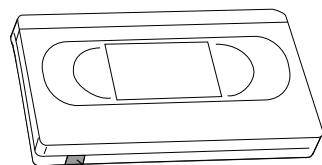

Record Safety Tab

1 Open "Setup Menu"


Press and hold the menu button on the remote control for 3 seconds.

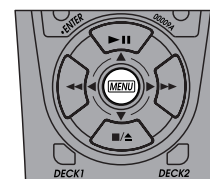

SETUP MENU	
1 →	Set Clock Menu
2 :	Copy/Record Settings
3 :	Tuner And Channel List
4 :	Dual-Deck Features
5 :	Reset Factory Settings
↑/↓ = Move → = Sel MENU=Quit	

2 Select "Dual-Deck Features"

Press 4.

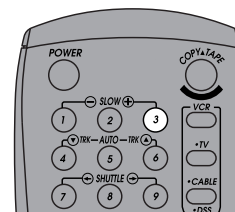


DUAL-DECK FEATURES	
1 →	Remote Eject On
2 :	Playback Mode Normal
3 :	Auto Play / Rewind Both
4 :	Panel Display Auto
5 :	Screen Display Auto
6 :	Deck1 Hi-Fi On
7 :	Deck2 Hi-Fi On
↑/↓ = Move → = Sel MENU=Quit	

3 Set "Auto Play/Rewind"

Press 3 repeatedly to set Auto Play/Rewind to:

- **Both** — Auto Play and Rewind will both be enabled.
- **Play** — Tapes without Record Safety Tabs will play automatically when they are inserted.
- **Rew** — Tapes will rewind automatically when they reach the end during playback.
- **Off** — Auto Play and Rewind will both be disabled.

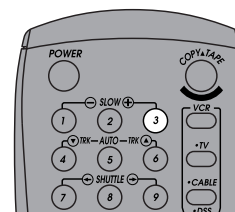

DUAL-DECK FEATURES	
1 →	Remote Eject On
2 :	Playback Mode Normal
3 :	Auto Play / Rewind Both
4 :	Panel Display Auto
5 :	Screen Display Auto
6 :	Deck1 Hi-Fi On
7 :	Deck2 Hi-Fi On
↑/↓ = Move → = Sel MENU=Quit	


Both
Play
Rew
Off

Playback Audio Settings

Your Dual-Deck VCR will playback tapes in Hi-Fi stereo sound. Occasionally, you may wish to turn Hi-Fi sound off and listen to the linear audio track only.

1 Open "Setup Menu"


Press and hold the menu button on the remote control for 3 seconds.

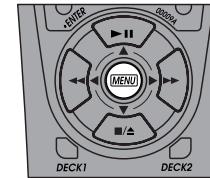

SETUP MENU	
1 → Set Clock Menu	
2 : Copy/Record Settings	
3 : Tuner And Channel List	
4 : Dual-Deck Features	
5 : Reset Factory Settings	
↑/↓ = Move → = Sel MENU=Quit	

2 Select "Dual-Deck Features"


Press 4.

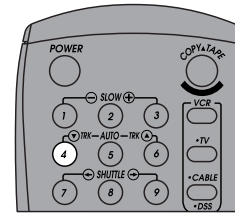

DUAL-DECK FEATURES	
1 → Remote Eject	On
2 : Playback Mode	Normal
3 : Auto Play / Rewind	Both
4 : Panel Display	Auto
5 : Screen Display	Auto
6 : Deck1 Hi-Fi	On
7 : Deck2 Hi-Fi	On
↑/↓ = Move → = Sel MENU=Quit	

3 Set "Deck 1 Hi-Fi"

Press 6 repeatedly to turn Deck 1 Hi-Fi on or off. When set to off, you will hear the linear mono track when you play tapes in Deck 1.

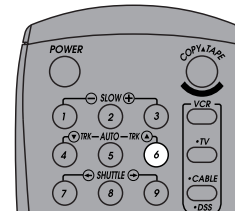


DUAL-DECK FEATURES	
1 : Remote Eject	On
2 : Playback Mode	Normal
3 : Auto Play / Rewind	Both
4 : Panel Display	Auto
5 : Screen Display	Auto
6 → Deck1 Hi-Fi	On
7 : Deck2 Hi-Fi	On
↑/↓ = Move → = Sel MENU=Quit	

On
Off

4 Set "Deck 2 Hi-Fi"

Press 7 repeatedly to turn Deck 2 Hi-Fi on or off. When set to off, you will hear the linear mono track when you play tapes in Deck 2.

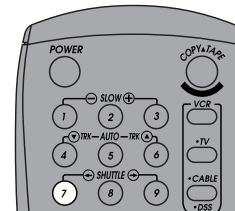


DUAL-DECK FEATURES	
1 : Remote Eject	On
2 : Playback Mode	Normal
3 : Auto Play / Rewind	Both
4 : Panel Display	Auto
5 : Screen Display	Auto
6 : Deck1 Hi-Fi	On
7 → Deck2 Hi-Fi	On
↑/↓ = Move → = Sel MENU=Quit	

On
Off

7 - Recording Features

Basic Recording

You can record your favorite TV shows at the touch of the Record button. Be sure your videotape has a Record Safety Tab. If it is missing, you can cover the opening with a small piece of tape. Warning: Do not cover this opening unless you are sure you want to record over the tape.

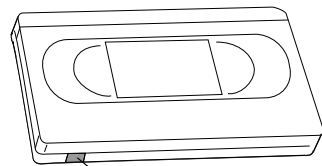

Record Safety Tab


1 Insert Tape

Insert a blank tape into Deck 2.



2 Select a Channel to Record

Use the 0-9 buttons or the Channel Up/Down arrow keys to select the desired channel.

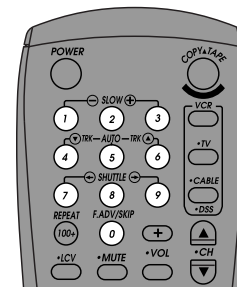


Or



3 Start Recording

 Press the Record button. For options while a recording is in progress, see Record Options on the next page.



Notes:


- Be sure the TV is set to channel 3 or 4 (whichever the switch is set to on the back of the VCR).
- Make sure the TV/VCR button on the front panel is set to VCR (the VCR icon will appear on the front panel display).
- Be sure the tape is long enough to record the entire program. To change the recording speed, see page 54.

Recording Options

While a recording is in progress, you can watch a different channel, watch a videotape in the other deck, or add recording time in 30-minute increments.


To Stop Recording...

Press Stop.

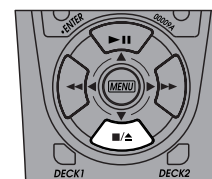

To Pause Recording...

Press Play/Still. To resume recording, press Record.

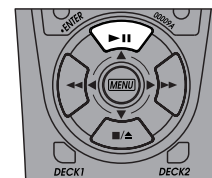


To Watch a Different Channel...

Press the TV/VCR Button on the front panel to switch to TV mode (the VCR icon will disappear from the front panel display), then select a different channel using your TV's tuner.



To Watch Another Videotape...

Insert a tape in the second deck and press Play. The TV View will change automatically.

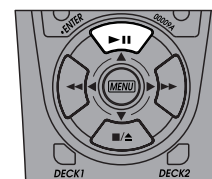

To Add Recording Time...

See One-Touch Recording (OTR) on page 53.

One-Touch Recording (OTR)


 
OTR allows you to add recording time in 30-minute increments at the touch of a button.

1 Start Recording

Follow the instructions on page 51.



2 Activate OTR

While in Record mode, press Record again to activate One-Touch Recording. OTR 0:30 will appear on the On-Screen Display and the VCR will record for exactly 30 minutes.

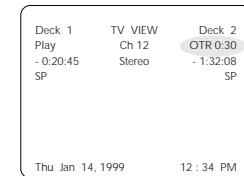

3 Add Recording Time

 While in OTR mode, press Record again to increase recording time in 30 minute increments up to 9 hours and 30 minutes.

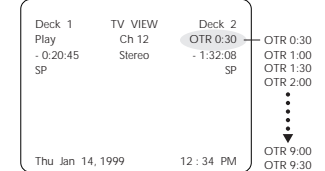



4 Activate Loop Record

When you reach OTR 9:30, press Record again to enter Loop Record. Deck 2 will record over and over again in a continuous loop until you press Stop. This can be used for continuous recording of security cameras.

Notes:

 - If you press Power during an OTR session, the Dual-Deck VCR will turn off automatically when the recording time has elapsed.
- When the recording time has elapsed, the VCR will stop automatically.

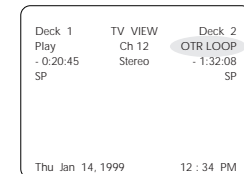

Record Speed

You can adjust the speed at which your Dual-Deck VCR records, e.g. to fit more than 2 hours of programming on a T-120 tape.

1 Start Recording

Follow the instructions on page 51.

2 Set Record Speed

Press the SP/SLP button on the remote control to switch the record speed between:



- **SP** — Standard Play.
- **SLP** — Super Long Play (3 times SP).

Maximum Record Time



Tape Length	SP (Standard Play)	SLP (Super Long Play)
T-120	2 hrs	6 hrs
T-160	2 hrs 40 min	8 hrs
T-180	3 hrs	9 hrs

Record Source

You can set the Dual-Deck VCR to record from the Tuner, Decks or Aux inputs. The Auto setting will record whatever is currently visible on-screen.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

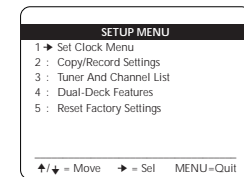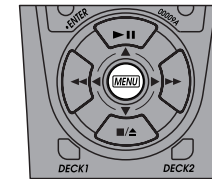

2 Select "Copy/Record Settings"



Press 2.

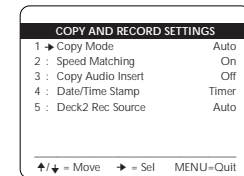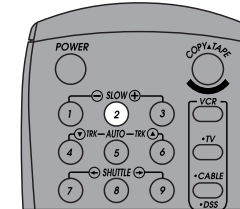

3 Set "Deck 2 Record Source"

Press 5 repeatedly to set Deck 2 Rec Source to:

- **Auto** — The current TV View (whatever you currently see on the screen).
- **Aux** — Source connected to front line inputs.
- **Deck1** — Tape playing in Deck 1.
- **Tuner** — Current television program.

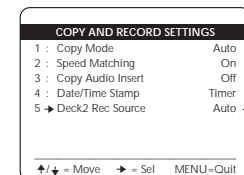
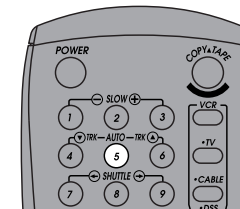


Date/Time Stamp

The Date/Time Stamp allows you to overlay the date, time, and record source at the start of, or continuously throughout, your recordings. You can use the stamp on all recordings or on timer recordings only. The stamp will not appear, however, when you copy a tape.



1 Open "Setup Menu"

Press and hold the Menu button for 3 seconds.

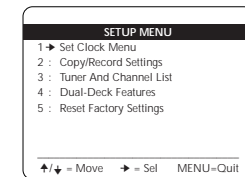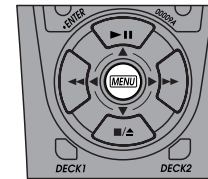

2 Select "Copy/Record Settings"



Press 2.

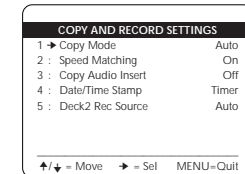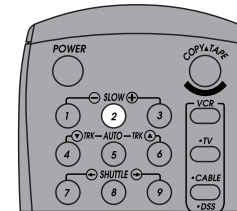

3 Set "Date/Time Stamp"

Press 4 repeatedly to set Date/Time Stamp to:

- **Timer** — The date, time, and record source will appear briefly at the start of all timer recordings only (default setting).
- **Cont (Continuous)** — The date, time, and record source will appear continuously over all recordings. The On-Screen Display and Menu system will be disabled if this setting is on. Press Stop on the recording deck to restore normal on-screen functions.
- **All** — The date, time, and record source will appear briefly at the start of all recordings except copies.
- **Off** — The Date/Time Stamp is disabled.

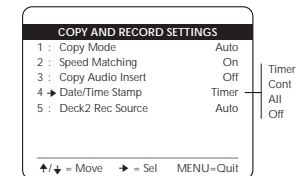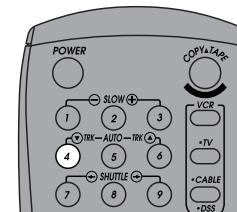

8 - Timer Recording

How to Set a Timer Recording


 
Sometimes you may wish to record a television show when you're not home. Or you may want to create a library of your favorite TV shows. The Timer Recording Feature allows you to set up to 16 events at a time up to 1 year in advance.

1 Open "Select Event Menu"


Press the Set Timer button.

Notes:

- If you haven't set the clock, the Set Clock menu will appear. You must set it before you can program a Timer Recording (see page 7).
- You can also access the Select Event Menu from the Main Menu. Press the Menu button to bring up the Main Menu; then press 3 to select Timer Recording.

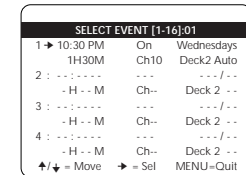



Or

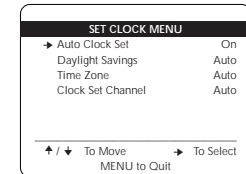

2 Choose Event Number


Use the number keys to enter the next available event number (1-16) as a 2-digit number; i.e., for "1", press "0-1".

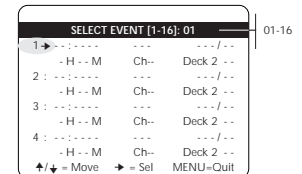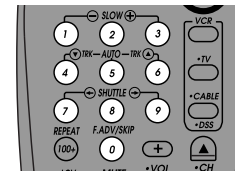

3 Set Event Date & Time

Use the number keys to set the date and time of the event. The default setting is the current date and time. To leave an entry unchanged, press the right arrow key. If you enter an invalid number, you will be prompted to reenter a valid one.

- **Set Month** — Enter the month as a 2-digit number; i.e. for August, press "08".
- **Set Day** — Enter the day as a 2-digit number; i.e. for the ninth, press "09".
- **Set Hour** — Enter the hour as a 2-digit number; i.e. for 12:00, press "12".
- **Set Minute** — Enter the minute as a 2-digit number; i.e. for 00:25, press "25".
- **Set AM/PM** — Enter 1 for AM or 2 for PM

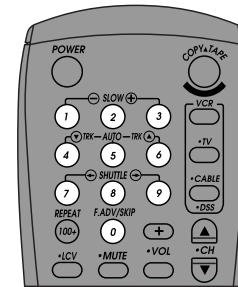

SET MONTH [01-12] 08						
Aug 1998					12:25 PM	1:00M
Su	Mo	Tu	We	Th	Fr	Sa
						1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					
1 - Time	Ch10	Deck2	Auto			

SET MONTH [01-12]
SET DAY [01-31]
SET HOUR [01-12]
SET MINUTE [00-59]
SET AM/PM [1/2]

4 Set Event Length

Use the number keys to set the length of the event. The default setting is 0 Hours and 30 Minutes.

- **Set Length (H)** — Enter the hours as a 2-digit number; i.e. for 1 hour, press "01".
- **Set Length (M)** — Enter the minutes as a 2-digit number; i.e. for 30 minutes, press "30".




SET LENGTH (H) [0-9] 00						
Aug 1998					12:25 PM	1:00M
Su	Mo	Tu	We	Th	Fr	Sa
						1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					
1 - Time	Ch10	Deck2	Auto			

SET LENGTH (H) [0-9]
SET LENGTH (M) [00-59]

5 Set Event Type

Use the number keys (1-4) to set how often the event will be recorded. The default setting is one time.

- 1 1 - Time** — The event will be recorded once only.
- 2 Weekly** — The event will be recorded every week.
- 3 Monday-Friday** — The event will be recorded every weekday.
- 4 Always** — The event will be recorded every day.

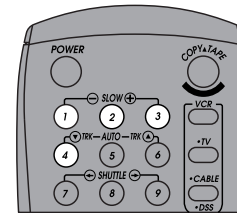

SET TYPE [1-4] : 1							SET TYPE [1-4]
Su	Mo	Tu	We	Th	Fr	Sa	
Aug 1998						1	1 - Time
2	3	4	5	6	7	8	Weekly
9	10	11	12	13	14	15	Mo-Fr
16	17	18	19	20	21	22	Always
23	24	25	26	27	28	29	
30	31						
1 - Time Ch10 Deck2 Auto							


Cable Box Recording—

If you are programming a timer recording with a cable box, set the Record Source to Channel 2, 3, or 4—whichever your cable box uses—and select the channel you wish to record on the cable box.

6 Set Recording Source

Use the number keys (1-2) to set the record source. The default setting is the current tuner channel.

- 1 Channel** — Records video and audio from the Tuner. Use the number keys (0-9) or up/down arrow keys to set the channel number.
- 2 Aux** — Records video and audio from the front auxiliary inputs.

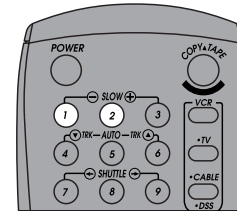


SET SOURCE [1-2] : 01							SET SOURCE [1-2]
Su	Mo	Tu	We	Th	Fr	Sa	
Aug 1998						1	Ch##
2	3	4	5	6	7	8	Aux
9	10	11	12	13	14	15	
16	17	18	19	20	21	22	
23	24	25	26	27	28	29	
30	31						
1 - Time Ch10 Deck2 Auto							

Complete Program Record
When Auto is selected, the Timer event begins to record in SP; the VCR then calculates how much time is remaining on the tape and adjusts the record speed to SLP if necessary to fit the entire event. If there is not enough tape to record the entire event, the VCR will record in SLP until the end of the tape is reached.

7 Set Recording Speed

Use the number keys (1-3) to set the recording speed. The default setting is Auto.

- 1 Auto** — Complete Program Record (see note at left).
- 2 SP** — Standard Play. Delivers best quality. A T-120 tape will record 2 hours.
- 3 SLP** — Super Long Play. Delivers maximum recording time. A T-120 tape will record 6 hours.

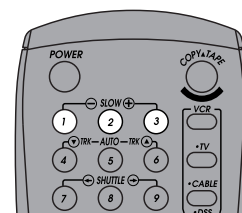


SET SPEED [1-3] : 1						
Aug 1998	12:25 PM 1H00M					
Su	Mo	Tu	We	Th	Fr	Sa
						1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					
1 - Time	Ch10	Deck2		Auto		

SET SPEED [1-3]
Auto
SP
SLP

8 Confirm Settings


When all settings are complete, press Menu to confirm the Timer event and view a summary of all programmed events.

- To program another event, select the next available event number.
- To edit an existing event, select an event number that has already been programmed.
- To delete an event, use the up/down arrow keys to select it, then press Clear.
- To exit the Event Summary screen, press Menu.

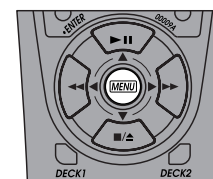

SELECT EVENT [1-16]-01			
1 → 10:30 PM	On	Wednesdays	
1H30M	Ch10	Deck2 Auto	
2 : ---:---	---	---/---	
- H - - M	Ch--	Deck 2 --	
3 : ---:---	---	---/---	
- H - - M	Ch--	Deck 2 --	
4 : ---:---	---	---/---	
- H - - M	Ch--	Deck 2 --	
↑/↓ = Move	→ = Sel	MENU = Quit	

Be sure your videotape has a Record Safety Tab. If it is missing, you can cover the opening with a small piece of tape. Warning: Do not cover this opening unless you are sure you want to record over the tape.

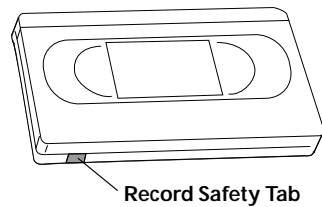


9 Insert Tape

Insert a blank tape with a Record Safety Tab into Deck 2.



10 Timer Recording is Complete!

The event is stored in memory and will record at the scheduled time. A red Timer icon will appear on the front panel display.

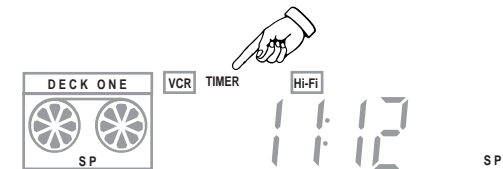

Notes:

- If there is a problem with your Timer Recording, the Timer icon will flash and a Timer Record Error will appear on the screen; see page 62.
- The Power will come on automatically when the Timer Recording begins.
- To stop an event in progress, press Stop for Deck 2. A warning message will appear on-screen. Press Stop again to cancel the event.

Timer Recording Errors

*If there is a problem with your Timer Recording, the word **Timer** will flash on the Front Panel Display and an error message will appear on the On-Screen Display. Once you correct the error, the event will begin if there is still time remaining for that event.*


Tape Missing

- No videotape in Deck 2.
- Insert a videotape in Deck 2.




Tape Missing Tab

- No Record Safety Tab in videocassette.
- Insert a video cassette with the record safety tape intact, or place a small piece of adhesive tape over the opening to permit recording.

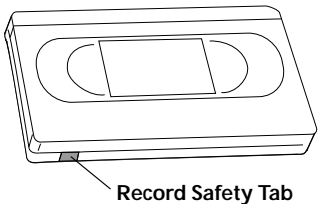


Not Ready

- Deck 2 is not in Stop mode (i.e. it is playing, rewinding, etc.).
- Press Stop on Deck 2.

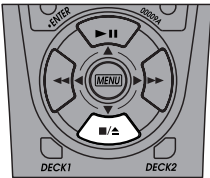

Overlapping Events

- Two or more events are programmed to occur at the same time:
- When you program a new event, the VCR checks all timer events for conflicts. If two events overlap, you will be prompted to either delete one of the events, or allow them to overlap.
 - If events overlap, the first event will be completely recorded, then the next event starts and the remainder of that event is recorded.

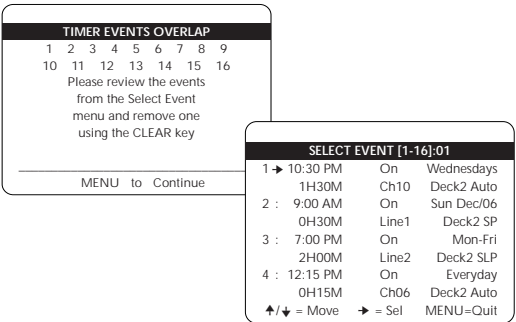

9 - Editing Features

8-Scene Editor

There are two ways to edit your movies with the Dual-Deck VCR. You can use the 8-Scene Editor, which automatically assembles up to 8 scenes when you mark their beginning and ending points. Or you can use the Sync Edit feature, which allows you to manually cut unwanted scenes while copying a tape.

1 Insert Source Tape

Put the tape with your source material in Deck 1.



2 Insert Target Tape

Put your blank tape in Deck 2. To ensure quality edits, it is best to record on blank or pre-formatted tapes. You can format your tapes by recording the line input over the entire tape with no signal.





3 Review Source Tape

Make a list of the scenes you wish to use in your final movie with their beginning and ending tape counter positions. Reorder the scenes if desired.


4 Open "Main Menu"

Press Menu.

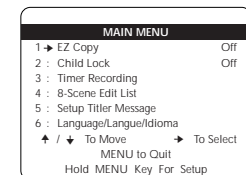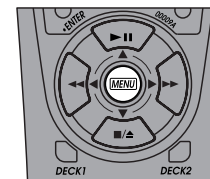

5 Select "8-Scene Edit List"

Press 4 to open the 8-Scene Edit List menu.
The number 1 and "Begin" will flash.

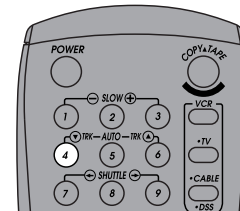


Scene : 1-----
Begin : 0:00:00
End : -:-:-:-

1 - 8 To Select Scene
EDIT For Begin And End
CLEAR To Correct
COPY TAPE To Make A Tape
MENU To Quit

6 Select Scene Number

Choose a scene number from 1 to 8. You
can enter scenes in any order. The scene
number you choose will flash.

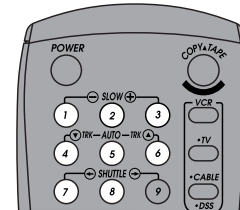

Scene : 1-----
Begin : 0:00:00
End : -:-:-:-

1 - 8 To Select Scene
EDIT For Begin And End
CLEAR To Correct
COPY TAPE To Make A Tape
MENU To Quit

7 Mark Beginning of Scene

Play the tape to the beginning of the
desired scene and press the Scene/Title
button. The scene number and "End" will
flash. Use the special playback functions to
quickly find the position you want; see
page 44.

 


Scene : 1-----
Begin : 0:00:00
End : -:-:-:-

1 - 8 To Select Scene
EDIT For Begin And End
CLEAR To Correct
COPY TAPE To Make A Tape
MENU To Quit

8 Mark End of Scene

Play the tape to the end of the desired
scene and press the Scene/Title button. The
next available scene number and "Begin"
will flash. Use the Clear button to correct
your entries. Repeat Steps 6-8 to load up to
8 scenes at a time.



Scene : 1 2-----
Begin : 0:00:00
End : -:-:-:-


1 - 8 To Select Scene
EDIT For Begin And End
CLEAR To Correct
COPY TAPE To Make A Tape
MENU To Quit

9 Make a Tape

When you are satisfied with the order and length of each scene, press Copy Tape to begin assembling the tape.

Notes:

- The Dual-Deck VCR will automatically copy each scene in order from the source tape to the target tape.
- When the process is finished, return to Step 6 to add more scenes, or press Menu to quit.

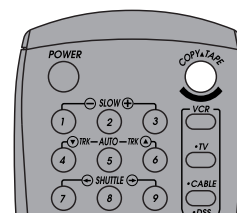

Sync Editing


The second way to edit movies is to use Sync (short for Synchronized) Editing. This method is useful if you want to copy part of a tape, or if you want to cut commercials while copying a TV show. The Copy Tape button is the key to synchronizing the playback deck with the recording deck.

1 Before You Begin —

- Turn off Auto Play; see page 48.
- Turn off EZ Copy; see page 38.


2 Insert Source Tape

Put the tape with your source material in Deck 1.

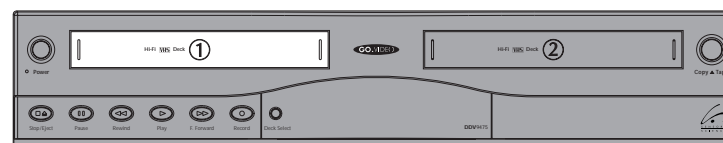


3 Insert Target Tape

Put your blank tape in Deck 2.

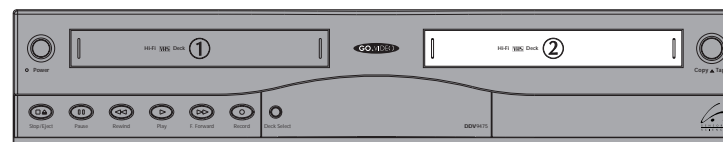

4 Position Target Tape

Play the tape in Deck 2 to where you want the copied material to start, then press Still. Leave at least 1 minute of blank tape at the beginning of a tape to ensure a crisp edit.

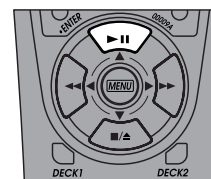

5 Set Target Tape to Record/Pause


While the target tape is in Play/Still mode, press Record for Deck 2. This puts the deck in Record/Pause mode.



To automatically cut commercials when performing a Sync Edit, see Skip Edit on the following page.


6 Position Source Tape

Play the tape in Deck 1 to the beginning of the segment you wish to copy, then press Still. Use the special playback functions to quickly find the position you want; see page 44. Copy will flash on the front panel display.

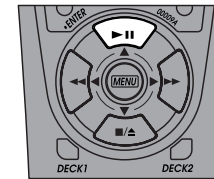


7 Start Sync Edit

Press the Copy Tape button. The tape in Deck 1 will begin copying to Deck 2.

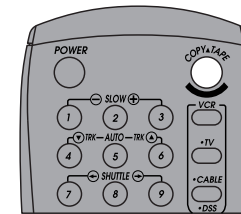


8 Pause/Resume Sync Edit

Press the Copy Tape button to pause the Sync Edit. Copy will flash on the Front Panel Display. To resume, press Copy Tape again. With the Sync Edit paused, you can reposition the source tape in Deck 1, e.g. to fast-forward over a commercial.

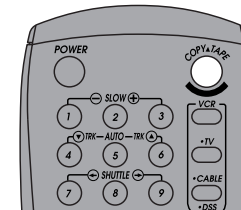

9 Stop Sync Edit

To stop the Sync Edit process, press Stop on both decks.

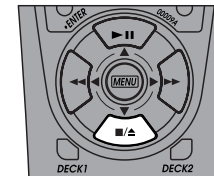

How to Cut Commercials with Skip Edit

The Skip Edit feature allows you to remove commercials during a Sync Edit at the touch of a button. Commercials typically run from 1 to 5 minutes in length. Each time you press Skip Edit, you will automatically cut 1 to 5 minutes of source tape from your target tape.

1 Set Up a Sync Edit


Follow Steps 1-6 on page 66.

2 Preview Commercials

As you position your source tape, note how many minutes the commercials are that you wish to cut.


3 Start Sync Edit

Press Copy Tape to begin copying the source tape from Deck 1 to Deck 2.

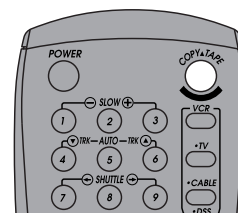

4 Cut the Commercials

When the commercials start, press F.Adv/Skip once for every minute of commercials to be deleted. The Dual-Deck VCR will automatically edit out the commercials on the target tape, then resume copying.


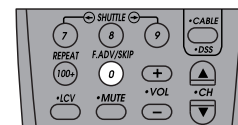


On-Screen Titler

You can add titles or credits to your movies with the On-Screen Titler. Create your message from over 100 letters, numbers and symbols. There are two steps to using the Titler: Setting up the Titler Message and Recording the Title.


1 Open "Main Menu"

Press Menu on the remote control.

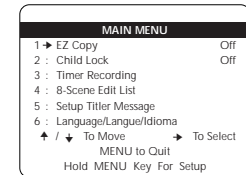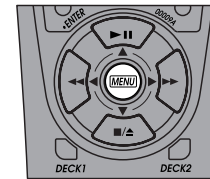


2 Select "Setup Titler Message"

Press 5.

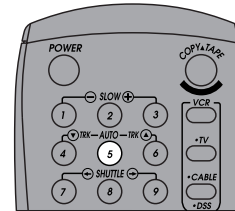


3 Compose Your Message

Use the up, down, left, & right arrow keys to select each character in your message, pressing Title after each to insert the character at the current cursor position. If you make a mistake, press Clear to backspace to the previous character.

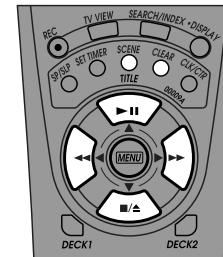

4 Save Your Message

When you are satisfied with your message, press Menu to save and quit. To record your message, see page 70.

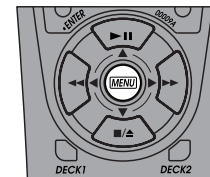


Recording Titler Message

Once you have set up your Title Message, you can record it by pressing the Scene/Title button while a tape is recording in Deck 2. You can record the title for up to 20 seconds in 5-second increments.


1 Start Recording

Insert your target tape in Deck 2 and initiate any Record mode, i.e., Record, One-Touch Record, Copy Tape, or Timer Record. See the corresponding chapters to activate any of these modes.

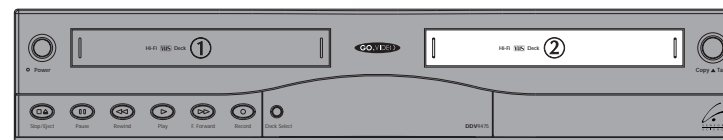

2 Record Titler Message

 While in Record mode, press Scene/Title repeatedly to record your Titler Message on-screen for 5, 10, 15, or 20 seconds.



Note: You must be recording a video signal when you record your Titler Message, i.e. you cannot record a title on blank tape.

Overview

The Dual-Deck VCR Search/Index features allow you to scan and search for Index Marks, quickly find blank space on a tape, search for exact tape counter positions, and return to 0:00:00. The real-time tape counter gives you real-time feedback on the precise position of your tapes.

Clk/Ctr Button

Press the Clk/Ctr button repeatedly to change the view on the front panel display among the following:



Clock

Shows you the time as set in the Set Clock Menu.



Real-Time Tape Counter

Shows you the tape position in the active deck in hours, minutes, and seconds.



Time Remaining

Shows you the amount of time left on the tape in the active deck, computed by subtracting the current tape position from the total tape length in hours and minutes.



 
Note: The Clock/Counter/Time Remaining display will not appear if there is a deck status message on the front panel display, such as Copy, Play, Stop, etc.

Placing Index Marks

Index Marks are like bookmarks on your videotapes. They are inserted automatically at the start of every recording, or you can place them manually anywhere on a tape.



Automatic Index Marks

Index Marks are placed automatically whenever you start recording. This includes normal recording, OTR (One Touch Recording), timer recording, copying, or sync editing.



Manual Index Marks

 You can place an Index Mark manually any time a tape is recording by pressing Search/Index on the remote control. "Index" will flash briefly on the On-Screen Display while the mark is recorded.

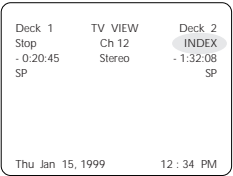



Index Scan

Index Scan will fast-forward or rewind to the nearest Index Mark, play a few seconds of tape, and then fast-forward or rewind to the next Index Mark. When you find the show you want to watch, press Play. Use this feature with the Date/Time Stamp to quickly find Timer Recordings on your tapes.



1 Open "Search Menu"

 From Stop or Play mode, press Search/Index.

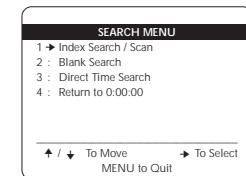



2 Select "Index Search/Scan"

Press 1.

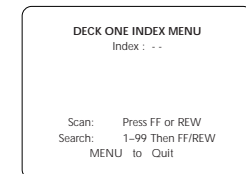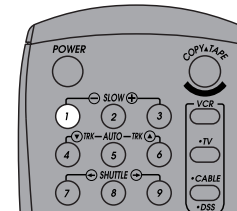


3 Scan for Index Marks

Press FF or Rewind to begin scanning for Index Marks forwards or backwards.

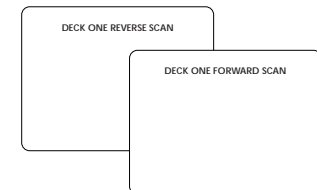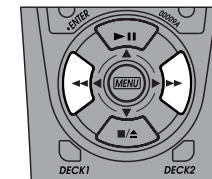

4 Review the Tape

When the Index feature locates an Index Mark, it will play the tape for 5 seconds. If it is the scene you want to watch, press Play. If it is not, the VCR will automatically search for the next Index Mark.


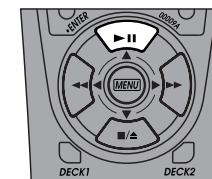


Index Search

Index Search will fast-forward or rewind a specific number of Index Marks from 1 to 99. When it reaches the desired Index Mark, it will play the tape. Use Index Search when you know the exact Index Mark you want to locate.



1 Open "Search Menu"

 From Stop or Play mode, press Search/Index.

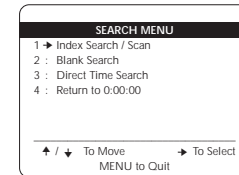



2 Select "Index Search/Scan"

Press 1.

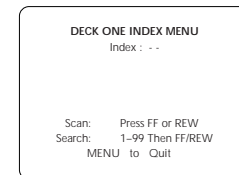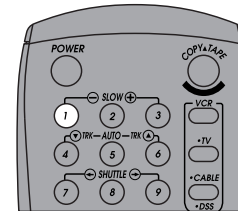



3 Enter # of Marks to Search

Enter a number from 1 to 99; i.e. press "0-5" for "5".

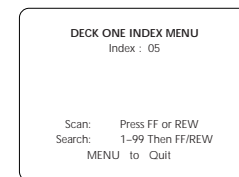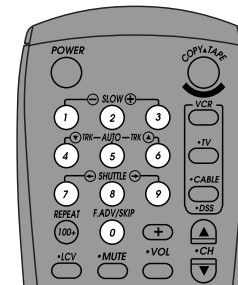

4 Search for Index Marks

Press FF or Rewind to begin searching for Index Marks forwards or backwards. When the VCR locates the Index Mark, it will play the tape.

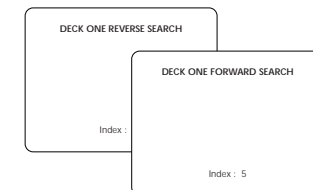
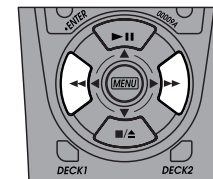


Blank Search

You can automatically find the next blank space of your videotape with Blank Search. This is useful when a videotape has been used but still has open space left for recording.


1 Open "Search Menu"

 From Stop or Play mode, press Search/Index.

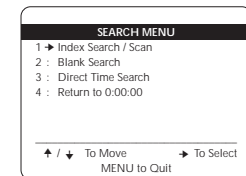

2 Select "Blank Search"

Press 2. The Dual-Deck VCR will automatically search for the next available blank space on your tape and stop. If no blank space is found, the tape will eject.

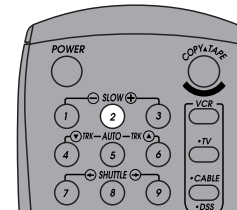


Direct Time Search

Use Direct Time Search to locate a specific tape location in hours, minutes, and seconds. This is especially useful when you have taken a careful inventory of the contents of your tape for editing—you can advance the tape directly to the beginning of the desired scene.



1 Open "Search Menu"

 From Stop or Play mode, press Search/Index.




2 Select "Direct Time Search"

Press 3.

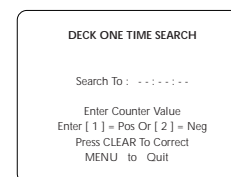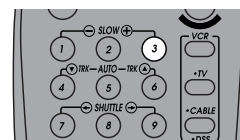



3 Select +/- Counter Value

Press 1 for positive or 2 for negative counter values.

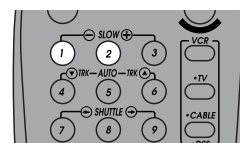


4 Enter the Time

Use the number keys (0–9) to enter the time in hours, minutes, and seconds. Press Clear to correct your entry.

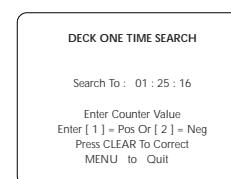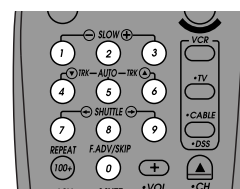

5 Start the Search

Press Search/Index to advance the tape to the specified time.


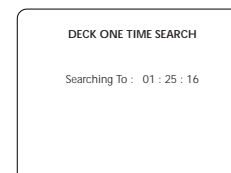


Return to 0:00:00

You can advance your video-tapes to tape counter position 0:00:00 at the touch of a button. This feature is useful when editing from a baseline counter value of 0:00:00.


1 Open "Search Menu"

 From Stop or Play mode, press Search/ Index.

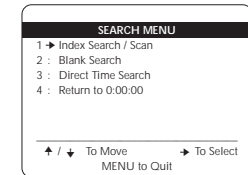

2 Select "Return to 0:00:00"

Press 4. The tape will rewind or fast-forward to tape counter position 0:00:00.

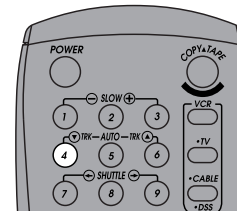

Cable Box Hookup


This chapter will show you how to connect external devices, such as a cable box, stereo, or satellite receiver, to your Dual-Deck VCR.

1 Connect Cable to Cable Box

Connect an RF antenna cable from your cable wall outlet to the "In from Cable" jack on the Cable Box.


2 Connect Cable Box to VCR

Connect a second RF cable from the "Out to TV" jack on the Cable Box to the "IN (FROM ANT.)" jack on the back panel of the VCR.

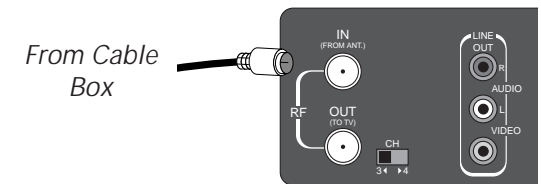


3 Connect VCR to TV

Connect the supplied RF cable from the "OUT (TO TV)" jack on the back panel of the VCR to your television's "Antenna In" jack.

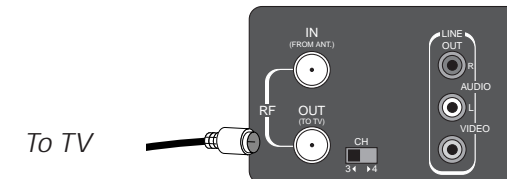



4 Plug In VCR

Connect the VCR power cord to a standard 120V/60Hz wall outlet.

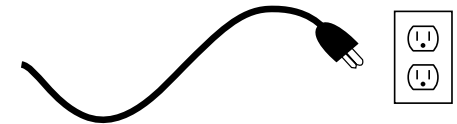


5 Turn On TV, VCR & Cable Box

Press the power buttons on the remote control, TV, and Cable Box.

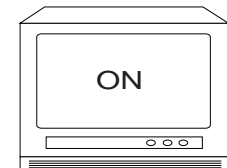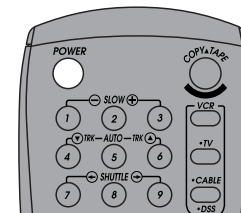


6 Set VCR Output Channel

Set the channel switch on the back panel of the VCR to 3 or 4, whichever is NOT used by your cable box.

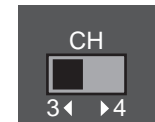

7 Tune TV to the Same Channel

Select the channel you used in step 6.

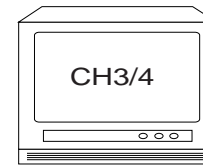

8 Connection is Complete!

The Set Language menu will appear on your television screen. Please proceed with Auto Setup in Chapter 2.

Notes:

- Use your cable box to select channels.
- If you are not getting a good picture, repeat steps 6 and 7 using the other channel; i.e. channel 4 instead of channel 3.




Audio Connections

You can enjoy stereo sound when watching movies and TV shows by connecting your Dual-Deck VCR to your home stereo system or stereo TV.

1 Connect VCR to Stereo

Connect RCA cables from the Left & Right Audio Outputs on the back of the VCR to the Auxiliary Inputs on your stereo receiver. If you are using a stereo television, connect the Video Output as well.

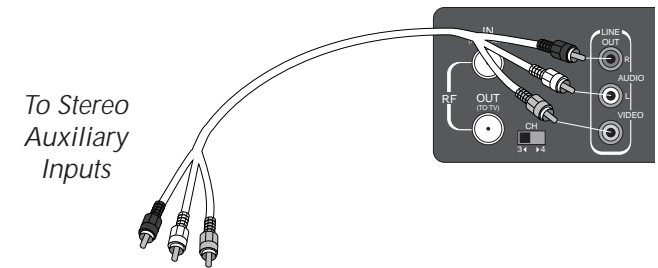

2 Set Playback Audio to Hi-Fi

Make sure that Deck 1 Hi-Fi and Deck 2 Hi-Fi are turned on in the Dual-Deck Features menu; see page 49.

DUAL-DECK FEATURES	
1 : Remote Eject	On
2 : Playback Mode	Normal
3 : Auto Play / Rewind	Both
4 : Panel Display	Auto
5 : Screen Display	Auto
6 → Deck1 Hi-Fi	On
7 → Deck2 Hi-Fi	On
↔ = Move → = Sel MENU=Quit	

And

DUAL-DECK FEATURES	
1 : Remote Eject	On
2 : Playback Mode	Normal
3 : Auto Play / Rewind	Both
4 : Panel Display	Auto
5 : Screen Display	Auto
6 : Deck1 Hi-Fi	On
7 → Deck2 Hi-Fi	On
↔ = Move → = Sel MENU=Quit	

3 Set Stereo to Auxiliary Mode

Set your stereo receiver or television to "Aux" or "Tape," whichever selects the line input for your brand of stereo.

4 Play a Tape

Insert a videotape in your VCR and adjust the volume on your stereo receiver or television. You should hear the audio through your stereo speakers!




TV Monitor Connections

Monitor-style televisions offer improved sound and picture over regular televisions because they receive the audio and video signals directly from the VCR through the line inputs. Note: A TV monitor is not the same as a computer monitor.


1 Connect VCR to TV Monitor

Connect RCA cables from the Audio and Video Outputs on the back of the VCR to the Audio and Video Inputs on your TV monitor.

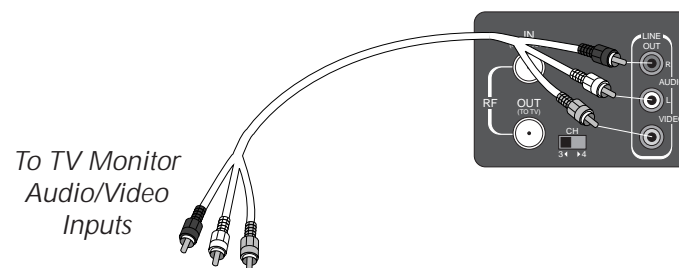


2 Set TV to Auxiliary Mode

Set your TV monitor to "Aux," "Video," or "Line." Refer to your monitor's owner's manual for the correct setting.

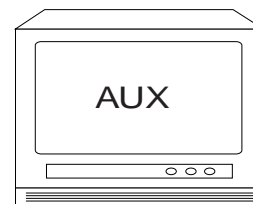

3 Connection is Complete!

Note: With this connection, the TV and VCR buttons have no effect. It is as if the TV/VCR button on the front panel were always set to VCR.

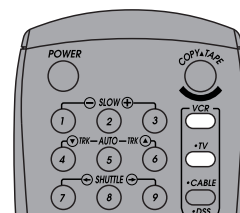

Connecting Other Video Equipment

You can connect a wide variety of audio/video equipment to your Dual-Deck VCR, including:


- A Third VCR
- Laser Disc Player
- DVD Player
- Camcorder
- Satellite Receiver
- Video Game

Since all of these devices use essentially the same connections, they will be described together.

1 Connect Device to VCR


Connect RCA cables from the Audio and Video Outputs of your external device to the Audio and Video Inputs on the front of the VCR.

To Audio/Video Outputs of External Device

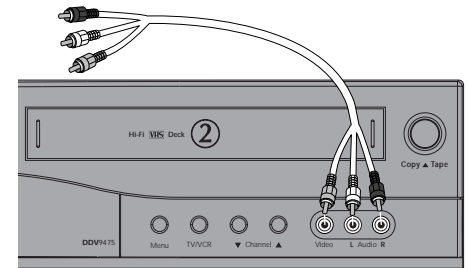


2 Watch Device

 Press the TV View button until the playback from Aux (front panel inputs) appears on your TV screen.



3 Record Device

 Press the TV View button until the playback from Aux (front panel inputs) appears on your TV screen, then press Record.



4 Timer Record From Device

Select Aux as your record source in the Timer Record menu. All other Timer Record settings should be set in the usual manner; see page 57.

 


Multi-Brand Remote Setup

You can program your remote control to operate many popular brands of televisions, cable boxes, and digital satellite systems (DSS).


1 Turn On TV

Press the power button on your TV.



2 Program TV Code

Press and hold down the TV button while entering the 2-digit code for your brand of television from the list at the right.

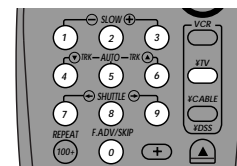


3 Check Your Results

If the TV advances to the next active channel, programming is complete! If the TV does not respond, try another 2-digit code. Some TV's are not listed but can be programmed.

4 Program Cable Box/DSS Code

Press and hold down the Cable/DSS button while entering the 2-digit code for your brand of Cable Box/DSS from the list on the next page.

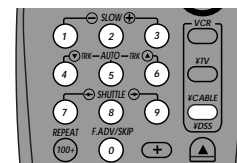


5 Check Your Results

If the Cable Box/DSS receiver powers on OR off, programming is complete! If not, try another 2-digit code. Some devices are not listed but can be programmed.

TV CODES

Samsung (old)	TV + 01
Sharp (new)	TV + 02
Sony	TV + 03
Magnavox	TV + 04
Sanyo	TV + 05
Goldstar (new)	TV + 06
RCA/GE	TV + 07
Goldstar (old)	TV + 08
Toshiba	TV + 09
Hitachi	TV + 10
JVC	TV + 11
Panasonic	TV + 12
Mitsubishi	TV + 13
Samsung (new)	TV + 14
Samsung (Latin)	TV + 15
Sharp (old)	TV + 16
Zenith	TV + 17
Goldstar	TV + 18
Daewoo	TV + 19
Sanyo (PAL)	TV + 20
Emerson	TV + 21
Sharp (PAL)	TV + 22
Samsung (Latin)	TV + 23
Panasonic 2	TV + 24

Multi-Brand Remote Operation

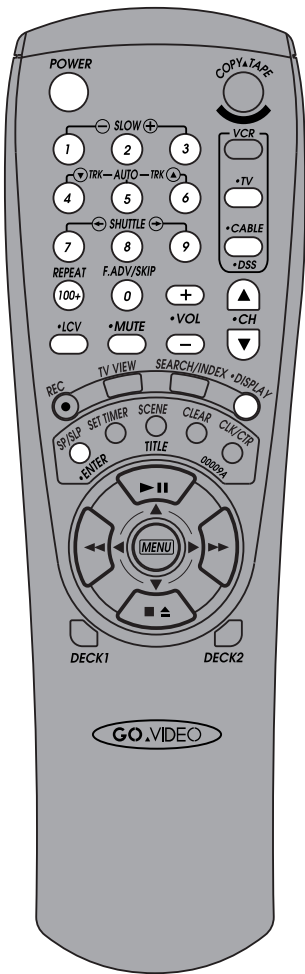

TV/Cable/DSS Keys

6 Operate Your TV, Cable Box, or DSS

- Press TV to set the remote control to operate your TV.
- Press Cable/DSS to set the remote to operate your Cable Box or DSS receiver.
- See the remote control diagram at left to see which keys are available in TV or Cable/DSS mode.

Notes:

- When the remote control is in TV or Cable/DSS mode, it will NOT operate your VCR. To return to VCR mode, press VCR on the remote control.
- The highlighted buttons will operate many brands of TV, but not all keys will function for all devices.

CABLE BOX/DSS CODES

Cable Box/DSS Brand	2-Digit Code
Anvision	13,20,21,22,23,24,25,26,58,62
Archer	29,42,44
Cablestar	13,20,21,22,23,24,25,26,58,62
Cableview	42,44
Citizen	42,44
Curtis	08,09,56,61
Diamond	29,44
Eagle	13,20,21,22,23,24,25,26,58,62
Eastern	28
GC Brand	42,44
Gemini	04,30
General Instruments	01,02,03,04,55,75,85
Hamlin	14,15
Hitachi	31,79,80
Jerold	01,02,03,04,55,75,83,85
Macom	31,79,80
Magnavox	13,20,21,22,23,24,25,26,58,62
Movietime	32,38,39
NSC	38,39
Oak	10,11,12,13,46
Oak Sigma	46
Panasonic	06,08,16,17,96
Philips	13,20,21,22,23,24,25,26,58,62
Pioneer	05,06
Pulser	43,44
Randtek	13,20,21,22,23,24,25,26,58,62
RCA	06,08,16,17,97
Regal	14,23,41
Rembrandt	32
Samsung	04,06,42,44,78,86
Scientific Atlanta	08,09,61,56
Sheritech	26,27,28
SL Mark	04,06,42,78
Sony	98
Sprucer	06,08,16,17
Stargate	04,06,42,44,78
Sylvania	19
Teknika	74
Telecaption	77
Televue	04,06,42,78
Texscan	18,19
TOCOM	33,34,48,49,73
Toshiba	36,99
Unika	20,21,29,42,44
Universal	43,52,63,82
Videoway	07,45,50,59
Viewstar	13,20,21,22,23,24,25,26,58,62
Warner Amex	06
Zenith	07,45,50,59

Frequently Asked Questions (FAQs)

The following are some of the most frequently asked questions about our Dual-Deck VCRs. If you don't find the answers you need here, you can contact our Customer Service Department by phone at (480) 922-0896. Office hours are Monday-Friday, 6:00 a.m. to 7:00 p.m. and 8:00 a.m. to 4:00 p.m. MST on Saturday. You can also contact us anytime at our e-mail address: "custsvc@sensoryscience.com." Or refer to a listing of authorized Go-Video service centers on our Web site at "www.govideo.com."

Why am I not getting a picture?

- Make sure the TV/VCR button on the front panel is set to VCR (the VCR icon on the front panel display should be on).
 - Make sure your TV is set to the same channel (3 or 4) as the switch on the back of your VCR.
-

Why is the picture quality poor?

- Change the channel switch on the back of the VCR, i.e. if it's set to 3 change it to 4. Make sure your TV is set to the same channel.
 - If the picture is bad while playing a tape, try adjusting the tracking control. Press the Auto (Automatic Tracking) button or the manual Tracking ▲ / ▼ keys on the remote control.
 - The video heads may be dirty; try cleaning the heads with a nonabrasive head cleaning tape.
-

Why can't I record from my cable box?

Make sure the VCR is tuned to the cable box output channel (2, 3, or 4). Confirm this channel with your local cable provider.

Why can't I Timer Record?

- Make sure the clock is set to the correct time, and the AM/PM adjustment is set correctly.
- If you have a cable box, make sure the Record Source is set to the cable box output channel (2, 3, or 4), and that the cable box is set to the channel you wish to record.

Why isn't my remote control working?

- Make sure you are pointing the remote control directly at the VCR and that there are no obstacles between the remote control and VCR. Sunlight on the VCR front panel can sometimes interfere with the remote signal.
- Make sure the batteries in your remote are fresh and installed properly.
- The "TV" button may have been pressed by accident. This makes the remote control only operate the television. Press the VCR key on the remote and try again.

Why do my tapes record at different speeds when I use Copy Tape?

Because Speed Matching is off in the Copy & Record Settings menu. Turn Speed Matching on to guarantee that the recording speed of the copy will match the playback speed of the source tape.

Why does the tape eject when I use Copy Tape or put a tape in to record?

Make sure the Record Safety Tab has not been removed from your tape. If the tab is missing, you can place a small piece of tape over the opening.

Why does the tape sometimes play or rewind when I don't want it to?

- Turn Auto Play/Rewind off in the Dual-Deck Features menu. When this feature is turned on, the VCR will automatically play tapes whenever you load them and/or rewind tapes when they reach the end.
- Turn EZ-Copy off in the Copy and Record Settings menu. When EZ-Copy is turned on, both decks will automatically rewind before recording when you press Copy Tape.

Why does my on-screen display show “Error”?

This indicates a problem with the VCR tape mechanism. Turn the power off and on again to reset. If this does not clear the error, unplug the VCR from the power outlet and inspect both tape slots for foreign objects, or for jammed or crooked tapes.

Why can't I eject a tape using my remote?

- Make sure Remote Eject is turned on in the Dual-Deck Features menu.
- If you have programmed scenes for editing in the 8-Scene Edit List, you cannot eject the tape in Deck 1 with the remote control. This protects you from losing your scene programming. You can either clear the scenes from the Edit List or press Stop/Eject on the front panel, which erases the scenes automatically.

Why can't I reset the Deck 1 tape counter?

If you have programmed scenes for editing in the 8-Scene Edit List, you cannot reset the Deck 1 tape counter. This protects you from losing your scene programming. You can either clear the scenes from the Edit List or press Stop/Eject on the front panel, which erases the scenes automatically.

Why doesn't my VCR work?

- A strong static electricity shock or other unforeseen circumstances may cause the control system of your Dual-Deck VCR to lock up. To reset the control system, first unplug the power cord from the wall outlet for 10 seconds and plug it in again.
- If this doesn't restore all operations to normal, unplug the VCR again for 15 minutes. You will then need to reset the clock (if the clock is still set, you haven't unplugged it long enough).
- If these steps do not correct the problem, the Dual-Deck VCR must be serviced by an authorized service center.

Why can't I bring up the 8-Scene Edit List?

- Insert a tape in Deck 1. The VCR must have a tape in Deck 1 for the Edit List to appear.
- Edit List is not available during Copy Tape.

Why aren't the tape counters moving?

If the VCR is playing a blank section of tape (only video noise, or "snow" appears on-screen), the tape counter cannot operate. The VCR requires a control track, which is only present on recorded tape, to provide counter information.

Why can't I get a menu or an on-screen display?

- If the VCR is playing a blank section of tape (only video noise, or "snow" appears on-screen), the VCR cannot produce on-screen menus or displays. Stop the tape or record on it to enable the displays.
- The remote may be set to control the TV instead of the VCR. Press the VCR button on your remote to reactivate it.
- If the Date/Time Stamp is set to Cont (Continuous) and a recording is in progress, the on-screen menus and displays are disabled. Press Stop on the recording deck to restore normal on-screen functions.

Why do I get a blue screen?

- If a channel is too weak to deliver a clear picture, the VCR will display a blue screen in its place. To see channels with poor reception, turn on the Show Weak Channels feature in the Tuner and Channel List menu.
- Double-check your antenna connections or tuner settings.

Why is my Power button blinking?

The VCR is in Auto Power Off mode. If you press the Power button while rewinding, copying, Timer Recording, One-Touch Recording or using EZ-Copy, the VCR will automatically turn off when the function is completed. Pressing the Power button toggles Auto Power On and Off.

Why is “Copy Tape” blinking on the front panel?

The Copy Tape procedure is in Pause mode. See Sync Editing on page 66.

Why do I lose stereo sound when I turn on my VCR?

If your TV and VCR are connected with an RF coaxial cable, you will only hear stereo sound if the VCR is turned off. To hear stereo sound with the VCR turned on, you must connect the TV and VCR with RCA line cables; see page 81.

Why won't my remote operate all my TV functions?

The remote control does not have a command for every function of your television. Some brands of television will only respond to a limited number of functions. See the table on page 86 for a list of common brands and functions.

Technical Specifications

VIDEO SYSTEM	1/2-inch VHS system, 4 rotary head helical scanning; FM azimuth luminance; chrominance: converted sub system phase shift
TELEVISION SYSTEM	NTSC-type color signal EIA standard (525 lines, 60 fields)
AUDIO TRACK	Normal: 1 track; Hi-Fi: 2 track
TAPE WIDTH	12.7 mm, 1/2 inch
TAPE SPEED	SP: 33.35 mm/s; SLP: 11.12 mm/s
PLAY/RECORD TIME	T-180 tape: SP 3 hours, SLP 9 hours
FF/REW TIME	T-120 tape: <110 seconds
HEADS	
Video:	DA 4 rotary heads
Audio:	2 rotary heads (Hi-Fi); 1 stationary head (Linear)
Control:	1 stationary head
Erase:	1 full track, 1 audio track
VIDEO	
Input:	RCA Type, 75 ohms unbalanced, 1 V P-P
Output:	RCA Type, 75 ohms unbalanced, 1 V P-P
Horiz Res:	Monochrome, more than 230 lines
S/N Ratio:	Better than 43 dB
AUDIO	
Input:	AUDIO IN (RCA) -8 dbm, 47K ohms
Output:	AUDIO OUT (RCA) -8 dbm, 1.5K ohm
TV Tuner:	181 channel frequency synthesized. VHF input Ch 2 - Ch 13. UHF input Ch 14 - Ch 69. VHF & UHF one input. Cable Ch 5A, A-5 through A-1, A-I, J through W+58, W+59 through W+84. 75 ohm unbalanced F-type connector.
S/N Ratio:	Better than 68 dB (Hi-Fi)
WOW & FLUTTER	Less than 0.005% (Hi-Fi)
RF MODULATION	Channel 3 or 4
FREQUENCY RESPONSE	20-20,000 Hz (Hi-Fi)
POWER REQUIREMENT	120V AC, 60 Hz, 26 watts maximum
CLOCK BACKUP TIME	1 minute
ENVIRONMENT	41-104° F (5-40° C); 10%-75% humidity
DIMENSIONS	21" x 4" x 13" (534 x 105 x 331 mm)
WEIGHT	17 lbs. (7.5 Kg)

Dual-Deck VCR Limited Warranty



Who Provides the Limited Warranty

During the warranty period, the Go-Video Warranty Administrator will honor Dual-Deck VCR service for 90 days labor, 1 year parts from the original date of consumer purchase. See below for Commercial, Industrial or Educational use coverage. Dual-Deck VCR remote controls are warranted for 90 days from the date of purchase.

Who is Protected

This warranty protects the original consumer owner of this Go-Video product.

What is Covered and How Long

This warranty covers internal operating parts and service/labor to repair or replace covered parts in this Go-Video product for 90 days labor, 1 year parts, from the date of purchase, defined as follows: (1) Original Consumer Retail Purchase; (2) First Rental Purchase Agreement; or (3) First Lease Purchase Agreement (the "Warranty Period"). Labor and replacement parts supplied during the Warranty Period are covered only for the remaining portion of the original Warranty Period. The Go-Video Warranty Administrator shall have no liability for service under this warranty if non-OEM (Original Equipment Manufacturer) replacement parts are used in the repair of your Go-Video product.

What the Owner Must Do If Service is Required

If service under this warranty is required, contact the Go-Video Warranty Administrator at (480) 922-0896 to determine the nearest authorized Go-Video service center.

Other Warranty Coverage

Commercial, Industrial or Educational use has the same warranty coverage as stated in this warranty.

What are the Exceptions

This warranty does **not** cover: (1) Normal maintenance service, such as video head cleaning. (2) Damage from misuse, abuse neglect or accident, natural disasters or Acts of God. (3) Cabinetry, decorative parts, A/C adapters, knobs or buttons. (4) The foreign country use of this product. (5) Go-Video product which has been electronically or mechanically modified in any way or incorporated into other products. (6) Installation and set-up service adjustments. (7) Owner instruction. Your Owner's Guide provides information regarding operating instructions and user controls. For additional information, contact your authorized Go-Video dealer.

Go Video is not responsible for any shipping, handling or insurance charges.

This Exclusive Limited Warranty excludes all incidental and consequential damages. Some states do not allow the exclusion of incidental and consequential damages, so the above exclusion may not apply to you.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY PERIOD. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Exclusive Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

GO-VIDEO WARRANTY ADMINISTRATOR

Sensory Science Corp.

7835 East McClain Drive • Scottsdale, Arizona 85260-1732

(480) 922-0896 • custsvc@sensoryscience.com

Index

Symbols

0–9 Buttons 23, 31, 32, 51
 100+ Button 13
 8-Scene Editor 63, 64

A

Add Channel 31
 AM/PM 8
 Antenna 2, 29
 Antenna Cable 1
 Antenna Cable, RF 79
 Antenna In 79
 Antenna, Indoor/Outdoor 29
 Arrow Keys 69
 Audio Connections 81
 Audio Inputs 83
 Audio Left Input 16
 Audio Outputs 83
 Audio Outputs, Left & Right 81
 Audio Right Input 16
 Audio Source 42
 Audio Status 27
 Audio Track, New 42
 Audio Track, Original 42
 Auto 29, 39
 Auto Channel Search 5, 30, 31, 32
 Auto Clock Set 7, 9, 11
 Auto Clock Set Channel 11
 Auto Play 19, 43, 48, 66
 Auto Play/Rewind 48
 Auto Rewind 48
 Auto Setup 3, 5, 80
 Auto Time Set 5
 Auto Tracking 46

Aux 26, 59, 83
 Auxiliary Inputs 81
 Auxiliary Mode 81

B

Basic Copying 37
 Basic Playback 43
 Batteries 1
 Blank Search 75
 Blank Space 71, 75

C

Cable 29
 Cable Box 79
 Cable Box Hookup 79
 Cable Box Recording 59
 CATV 29
 Ch +/- Buttons 13, 32
 Change Channels 26
 Channel 59
 Channel List 31, 32
 Channel Number 59
 Channel Up/Down 15, 51
 Child Lock 19, 21
 Clear Button 13, 23, 25, 64, 76
 CLK/CTR Button 17, 71
 Clock 7, 71
 Clock Set Channel 11
 Clock/Counter/Time Remaining Display 71
 Commercials, Cutting 66, 67, 68
 Commercials, Previewing 68
 Complete Program Record 60
 Computer Monitor 82
 Confirm Settings 60

Connect Antenna to VCR 2
 Connect VCR to TV 2
 Connect VCR to TV Monitor 82
 Connecting Audio Source 42
 Copy 17, 27, 71
 Copy Audio Insert 41, 42
 Copy Mode 39
 Copy New Audio Track 42
 Copy Tape 13, 15, 37, 41, 65, 70
 Copy Tape Button 37, 66, 67, 68
 Copy/Record Settings 21, 41
 Copying 72
 Copyright 2
 Cue 44

D

Date and Time 27
 Date/Time Stamp 56, 73
 Day 8
 Daylight Savings Time 7, 9
 Deck 1 14, 26, 37, 39, 40, 43, 49, 66, 67, 68, 81
 Deck 2 14, 26, 37, 39, 40, 43, 49, 63, 66, 67, 68, 70, 81
 Deck 2 Record Source 55
 Deck Counter Position 27
 Deck One 17
 Deck One Tape Status 17
 Deck Play/Record Speed 27
 Deck Record Source 27
 Deck Select 15
 Deck Status 27, 28
 Deck Two 17
 Deck Two Tape Status 17
 Direct Time Search 76
 Display 13

Display Button 28
Display Message 27
Double-Speed 45
Dual-Deck VCR 1

E

English 5, 6
Error Messages 27
Event Length, Set 58
Event Number, Choose 57
Event Type, Set 59
EZ Copy 21, 38, 66

F

F.Adv/Skip Button 44, 45, 68
F.Forward 14, 15, 24, 44, 74
Factory Settings 25
FAQs 87
Fast-Forward 73, 74
Frame Advance 44
Freeze Frame 44
French 5, 6
Frequently Asked Questions 87
Front Panel 15, 43
Front Panel Display 17, 18, 52, 62, 71
Front Panel Display Settings 18
Front Panel Inputs 16, 83

H

Hi-Fi 17, 34, 81
Hi-Fi stereo sound 49
HQ1 (High Quality 1) 39
HQ2 (High Quality 2) 39

I

Index Marks 71, 73, 74
Index Marks, Automatic 72
Index Marks, Manual 72
Index Marks, Placing 72
Index Scan 73
Index Search 74
Insert Tape 43, 61
Internal Clock 5

J

Jet Search 44, 45

L

Language 6
LCV (Last Channel Viewed) 13
Left Arrow Key 23
Linear Audio Track 49
Loop, Continuous 47
Loop Record 53
Lowest Channel Found 30

M

Main Menu 6, 21, 23
Menu Navigation - Front Panel 24
Menu Navigation - Remote Control 23
Message, Composing 69
Message, Saving 69
Minute 8
Monday-Friday 59
Mono 34, 35
Month 8
Multi-Brand Remote Operation 86

Multi-Brand Remote Setup 85
Music 41
Mute 13

N

Not Ready 62
Number Keys (0-9) 32, 59, 76
Number Keys (1-4) 59

O

On-Screen Display (OSD) 26, 28, 53, 62, 72
On-Screen Display Elements 27
On-Screen Language 5, 6
On-Screen Menu System 21
On-Screen Titler 69
One-Touch Recording (OTR) 52, 53, 70
OSD 26, 28
OTR (One Touch Recording) 53, 72
Overlapping Events 62

P

Panel Display 18
Pause 15
Picture Search 44, 45
Play Button 15, 17, 24, 43, 44, 52, 71, 73
Play Mode 44, 74, 76
Play Tape 43
Play/Still Mode 66
Playback 17
Playback Audio 81
Playback Audio Settings 49
Playback Speed 40

Plug In VCR 2
PM 8
Power 13, 15
Power Button 3, 53, 85

Q

QSound 13
Quick Reference Guide 1

R

RCA Cables 16, 81, 82, 83
Read Me First 1
Real-Time Tape Counter 71
Record Button 15, 51, 53, 70, 83
Record Mode 53, 70
Record Safety Tab 43, 51, 61, 62
Record Source 55
Record Speed 17, 27, 40, 54
Record/Pause Mode 66
Recording 72
Recording, Basic 51
Recording Deck, Set 60
Recording Options 52
Recording Source, Set 59
Recording Speed 51
Recording Speed, Set 60
Recording, Start 70
Recording Titles 69
Registration Card 1
Remote Control 1, 3, 19, 20, 23, 40, 43, 72, 79, 85
Remote Control Batteries 1
Remote Control Overview 13
Remote Eject 20

Remove Channel 32
Repeat 45
Reset Factory Settings 25
Return to 0:00:00 77
Reverse Jet Search 45
Reverse Picture Search 45
Review 45
Rewind 15, 17, 24, 45, 73
Rewind Button 74
RF Antenna Cable 79
Right Arrow 23

S

SAP (Second Audio Program) 17, 34, 35
Satellite Receiver 79
Scene, Beginning of 64
Scene, End of 64
Scene Number 64
Scene/Title Button 64, 70
Screen Display 28
Search/Index Button 72, 74, 76
Search/Index Features 71
Second Audio Program 17
Sequential/Loop 27
Sequential/Loop Playback 47
Set AM/PM 8, 58
Set Clock 7, 21
Set Clock Manually 7
Set Day 8, 58
Set Hour 8, 58
Set Language 5
Set Language Menu 3, 80
Set Length (H) 58
Set Length (M) 58
Set Minute 8, 58

Set Month 8, 58
Set Panel Display 18
Set Screen Display 28
Set Time Zone 10
Set TV to Auxiliary Mode 82
Set VCR Output Channel 2
Set Year 8
Setting Copy Audio Insert 41
Setting Date/Time Stamp 56
Setting Playback Mode 47
Setup Menu 9, 21, 22
Setup Titler Message 69
Show Weak Channels 33
Shuttle 45
Skip 45
Skip Edit 67, 68
Slow +/- Buttons 44
Slow Motion 44
SLP 17, 40, 54, 60
Source Tape 37, 63, 66, 67
SP 17, 39, 40, 54, 60
SP/SLP Button 14, 40, 54
Spanish 5, 6
Special Playback Features 44
Speed Matching 40
Standard Play (SP) 54, 60
Stereo 17, 34, 79
Stereo Sound 17, 81
Still Button 14, 44, 67
Stop 14, 17, 71, 75, 76
Stop/Eject 15, 24
Super Long Play (SLP) 54, 60
Sync Edit 63, 67, 68
Sync Edit, Pausing 67
Sync Editing 66, 72

T

T-120 Tape 54, 60
Tape Counter Positions 71
Tape Counter, Real-Time 71
Tape Missing Tab 62
Tape Speed 17
Target Tape 37, 63, 66
Time 8, 11
Time Remaining 71
Time Zone 7, 9, 10
Timer 17, 56, 62
Timer Event 60
Timer Record 70, 83
Timer Record Menu 57
Timer Record Settings 83
Timer Recording 17, 21, 25, 27, 56,
57, 61, 62, 72, 73
Timer Recording Errors 17, 62
Timer Recording, Setting 57
Titler Message 69, 70
Titler Message, Recording 70
Titler, On-Screen 69
Tracking 46
Tracking, Adjust Manually 46
Tune TV 3
Tuner 26, 28, 55

Tuner & Channel List 21, 32, 33

Tuner Audio 34

Tuner Band 29, 30

Tuner Information 28

Turn On TV 3

Turn On VCR 3

TV 2, 3, 13, 79

TV Button 85

TV Mode 52

TV Monitor 82

TV Monitor Connections 82

TV, Tuning 80

TV View Button 14, 26, 27, 83

TV+SAP 35

TV/VCR Button 13, 15, 17, 51,
52, 82

U

Up/Down Arrow Keys 59

Up/Down Arrows 23

User's Guide 1

V

VCR 2, 3, 17, 19

VCR Mode 17, 85

VCR Output Channel 80

VHF/UHF Antenna 29

VHS, Standard 43

Video 82

Video Equipment, Connecting
Other 83

Video Inputs 83

Video Line Input 16

Video Outputs 81, 82, 83

Voice-Overs 41

Vol +/- 13

W

Warranty 1

Watch Another Videotape 52

Weak Channels 33

Weekly 59

X

XDS 11

Y

Year 8